



SONIC BOOMBOX PARTY SPEAKER

Wireless Stereo Speaker with Subwoofer

BLUETOOTH® INDOOR & OUTDOOR PARTY SPEAKER



Instruction Manual

Please Read All Instructions Carefully and
Retain For Future Use

PACKAGE CONTENTS

Bluetooth® Indoor and Outdoor Party Speaker

Shoulder Strap

USB Charging cable

3.5mm auxiliary cord

This instruction manual

FEATURES

1. Bluetooth® speaker with built-in Subwoofer
2. Clean, crisp, booming sound
3. Compatible with Bluetooth® devices
4. Can connect other devices via 3.5mm auxiliary cord
5. Durable, rugged and splash proof, perfect for indoor or outdoor use
6. Built-in USB/SD card slots for listening to music from digitally stored files
7. USB rechargeable built-in battery
8. Detachable shoulder strap allows for easy portability

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. When using unit, always place on even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into the openings.
9. Keep free of lint, dust, hair, etc...
10. Do not use this unit for anything other than its intended use.
11. This is not a toy.
12. Keep unit out of reach of small children.
13. Do not play music at excessive levels especially near children as damage to hearing may occur.

DESCRIPTION OF CONTROLS

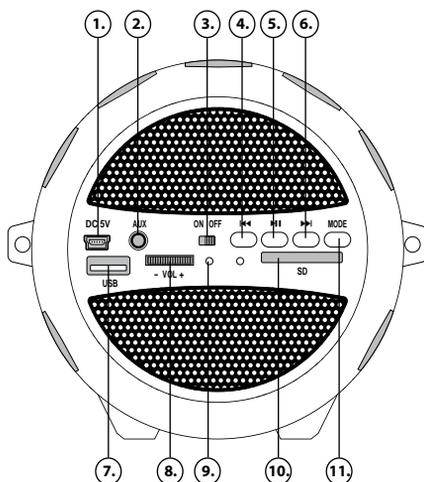


Figure 1

1. **USB Charging Port**
2. **Auxiliary Port**
3. **ON / OFF Switch**
4. **Skip Backward**
5. **Play / Pause**
6. **Skip Forward**
7. **USB Port (Stream Music)**
8. **Volume Controller**
9. **LED Light Indicator**
10. **SD Slot (Stream Music)**
11. **Mode Button**

INSTRUCTIONS FOR USE

Charging the Speaker (for best results, fully charge the unit before use.)

1. Connect the included USB cord to the charging port (#1 on figure above) and insert the other end into a port on your computer or similar power source.
2. The Red LED on the back turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes approximately 4 to 5 hours to fully charge.

Note: In order to have optimum battery life, it is recommended to not charge in excess of 6 hours at any one time. Overcharging can adversely impact the battery life.

On/Off Controls of Speaker

1. To Turn "ON" slide the "POWER ON/OFF" Switch (#3 on figure above) to the ON position.
2. To Turn "OFF" slide the "POWER ON/OFF" Switch (#3 on figure above) to the OFF position.

Pairing your device via Bluetooth® (will only work with Bluetooth® enabled devices)

1. Turn ON the speaker.
2. You will hear a BEEP TONE and the LED Lights will blink steadily. The speaker is now in pairing mode.
3. Turn on the Bluetooth® on your Bluetooth® device.
4. Your device will begin searching for Bluetooth® ready devices.
5. The pairing name of the Party Speaker is "GT PARTY SPEAKER". Pair it with this device.
6. If required, enter the password '0000' to confirm and finalize pairing.
7. Once paired successfully, the Blue LED will illuminate.
8. If you fail to pair it within the time frame or you want to pair it with a new device, please repeat the instructions in this section.

(Note: Speaker will automatically pair with previously paired devices)

Listening to Music Wirelessly

Please ensure that your Bluetooth® enabled device (iPhone®, Tablet, iPad®, iPod®, Computer or other Smartphone) is paired with the Bluetooth® Speaker to stream music wirelessly. Once it is paired, play music from your device by selecting your favorite song, album or playlist from it.

Function	Operation	Button
Increase / Decrease Volume	Playing Music	Use the Volume Controller located on the control panel to adjust the volume to your desired level (see Figure 1)
Pause	Playing Music	Press Play/Pause button ⏸ once to pause music (see Figure 1)
Play	Pause	Press Play/Pause button ⏸ again to resume (see Figure 1)
Previous Track	Playing Music	Short press the ⏮ button to go back to the previous track (see Figure 1)
Next Track	Playing Music	Short press the ⏭ button to advance to the next track (see Figure 1)

Aux Function of the Speaker (to play music from non-Bluetooth® devices)

1. Turn on the speaker.
2. Plug the 3.5mm auxiliary cord (included) to the auxiliary port of the speaker (see Figure 1).
3. Plug the other end of the 3.5mm cord into the audio device with the music. (iPhone®, iPad®, Tablet, MP3 Player, Computer and other Smartphones)
4. Press "MODE" button to select the "Aux-In" function (see Figure 1).
5. Select your favorite song on the source audio device.

Note: Once the Aux cable is connected to the unit and device, music via Bluetooth® connection will be stopped. Media and volume can be controlled only through the source devices, while playing music in the Auxiliary mode.

Listening to Music using USB/SD Card Slot

1. Turn on the speaker.
2. Insert SD Card or USB Flash Drive into the correct slot (see Figure 1). Music will automatically start to play.
3. Press Skip Forward or Skip Backward to move forward or backward on your playlist.
4. Press Play/Pause to PLAY or PAUSE a track.

Note: While using Bluetooth®, if you insert SD Card or USB Flash Drive, speaker will disconnect the Bluetooth® connection and switch to the USB/SD card function. You can press the MODE button again to play via Bluetooth®.

TIPS:

1. Press the **MODE** button to switch between different functions of the speaker. Switch between Bluetooth®, SD Card and USB or AUX-In.
2. When the unit is not in use, turn OFF the device to save battery power.
3. Do not overcharge the unit. Do not exceed 6 hours of charging to avoid overcharging the unit.
4. To preserve battery power while in use, play at moderate volume instead of max volume.

Specifications:

Bluetooth® Version:	2.1 + EDR
Subwoofer size:	3"
Speaker Output:	2x2 Watts + 1 x 5 Watts Subwoofer
Unit Size:	10" x 5.5" x 4.5"
Approx Unit Weight:	2.2 lbs
Play Time:	Up to 1.5 hours (max volume) and 4 hours (moderate volume)
Charge Voltage:	DC5V (USB)
Bluetooth® Range:	27 to 33 Feet
Built-In Rechargeable Battery:	3.7V/1000mAH

(Note: Battery life and charging time may vary based on usage and types of devices connected.)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Sound Level	Source volume too low Battery low	Raise source volume Charge Battery
Sound Distorted	Battery nearly dead	Charge Battery
No Sound	Source turned off Speaker turned off Volume turned down on source Music paused on either source or speaker	Turn on source Turn the speaker on Adjust volume on source Push play on source and/or speaker

CARE and MAINTENANCE

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for recycling.

Note: iPhone®, iPod® and iPad® are trademarks of Apple, Inc, registered in the US and other countries.

FCC Instructions

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received including interference that may cause undesired operation.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. All warranties are covered by the retailer involved in the sale or promotion of this product (co-warrantor) of this manufacturer warranty. Do not contact the Manufacturer for replacement parts and or for warranty related issues.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.