


SPEAKER

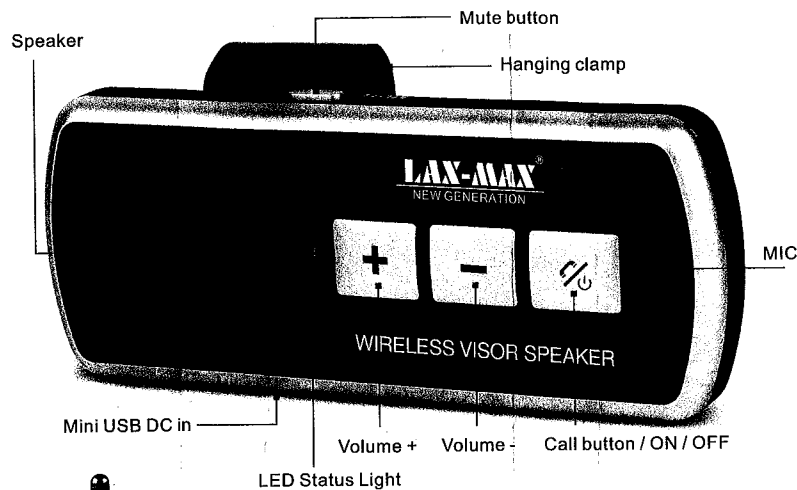

CAR Charger
(Included)

Copyright © Lakshmi International, Inc., 2016-2017

All Rights Reserved

This publication is protected by copyright and all its rights reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Lakshmi International, Inc. The information in this publication has been carefully checked and is believed to be accurate. However Lakshmi International Inc., assumes no responsibility for any inaccuracies, errors, or omissions that may be contained in this document. In the interest of continued product development, Lakshmi International, Inc. reserves the right to make improvements in its documentation and the products it describes at any time, without notice or obligation.


Features

- Wireless connectivity
- Built in rechargeable battery
- Built in Mic for handsfree talking
- Conveniently clips onto Car Visor
- Charging cable & Car USB Charger included



Charging the Visor Speaker

- Connect the supplied cable to DC jack of the Visor Speaker and other end to USB power outlet or to a 12V charging port of your vehicle.
- Please make sure battery is fully charged before using. For best results (or to charge faster) don't use the unit while charging.

Pairing your device to the Visor Speaker

- Press and hold the  (Power/Call button) for 3 seconds to power on the unit. The Led indicator light will flash
- From your smartphone under "Wireless Connections" tab, activate the BT and scan for "LI-T50137BT" then pair.
- Now the LED indicator light will be solid blue confirming your device has been paired successfully.
- Wireless range up to 30 Feet
- Suggested Mic range while using hands free up to 18"

Visor Speaker Controls for Calls

- Press  to receive or disconnect call on connected smartphone
- Press  twice to redial last dialed number.
- Press and hold the "-" or "+" buttons to adjust sound volume.
- Use Mute button to mute speaker and take call privately while connected to unit.

Note:

- Your Visor Speaker can only be connected to one Device at a time.
- In order to connect to another device, you must disconnect from current connection.
- Follow the above steps for new connection.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Manual Please keep this manual in a safe place for future reference