

**24-Hour
Repeating Cycle**


Heavy Duty Push-Pin Timer

Model: TNINL2412

STEP-BY-STEP INSTRUCTIONS


1. Set a period of time for the timer to be "ON"

Locate the gray pins and push them DOWN at the marked times when the attached device is to be "ON". Each pin represents a 30 minute time interval.

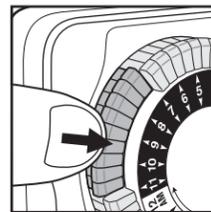


2. Set the "CURRENT TIME"

Rotate the entire gray push-pin dial clockwise until the arrow marked "CURRENT TIME" aligns with the current time of day on the dial. "AM" hours are highlighted in WHITE. "PM" hours are highlighted in BLACK.

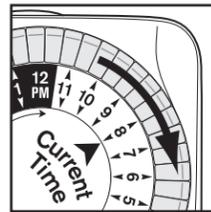


3. Set "BYPASS SWITCH"

When the switch is in the "TIMER ON" position, timer will automatically turn the attached device on and off. When the switch is in the "OUTLET ON" position, timer will bypass the programming and the attached device will remain on.

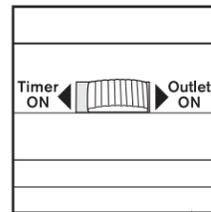


4. Plug timer into an ELECTRICAL OUTLET

Timer will rest against outlet at a slight upward angle, making it easier to see and operate the push-pin dial.

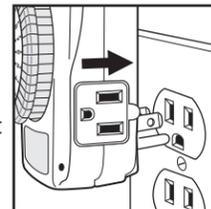

5. Attach ONE DEVICE to the timer

Plug the device into the outlet on the side of the timer.

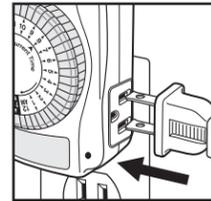


HELPFUL TIPS

- This timer repeats the same settings daily.
- To push down or pull up the gray pins, use your finger or the tip of a small non-metallic insulated tool, such as a pencil or toothpick.
- Set up to 48 different "ON" and "OFF" times in a 24 hour period by the positioning of the gray pins. Pins pressed down represent the 'ON' time. Pins in the up position represent 'OFF' time.
- Switching the timer to "OUTLET ON" will bypass programming, however, the timer dial will continue to rotate and maintain the current time.
- Once the timer is plugged into an outlet, it will sit at a slight upward angle making it easier to read and program the unit.

NIGHTLIGHT INCLUDED!

Light-sensing photocell automatically turns nightlight ON and OFF when the environment becomes dark or light.

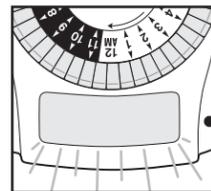

IN CASE OF POWER FAILURE

Timer will stop operating if the power goes out. Once power is restored, reset the time of day as explained in Step 2 of the instructions.

SAFETY INFORMATION & SPECIFICATIONS

THIS TIMER IS A "GROUNDED" DEVICE



The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet.

THIS TIMER IS FOR USE WITH A 125VAC POWER SOURCE.
125VAC / 60Hz

DO NOT ATTACH A DEVICE THAT EXCEEDS THE UNIT RATINGS:
15A / 1875W Resistive (General Purpose)
10A / 1250W Tungsten (Incandescent)
1/2 HP (Horsepower Motor)

⚠ WARNING

Risk of Electric Shock

Keep children away. Unplug timer before cleaning. Fully insert plug. Do not use near standing water.

Risk of Fire

Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.). Do not exceed electrical ratings.

⚠ AVERTISSEMENT

Risque de choc électrique

Garder hors de portée des enfants. Débrancher la minuterie avant de nettoyer. Insérer complètement la fiche. Ne pas utiliser près de l'eau stagnante.

Risque d'incendie

Ne pas utiliser pour contrôler les appareils contenant des éléments chauffants (équipements de cuisine, radiateurs, fers à repasser, etc.). Ne pas excéder la capacité électrique.

LIMITED 1 YEAR WARRANTY

Prime warrants this product to be free from manufacturing defects for a period of one year from the original date of purchase ("warranty period"). This warranty is limited to the repair or replacement of this product only and Prime is not liable for any consequential or incidental damage to other products that may be used with this unit. This warranty is effective only if such unit is returned to Prime not later than thirty (30) days after the expiration of the warranty period. Warranty is void if damage is due to neglect, misuse, alteration, modification, improper installation, or repair by other than Prime. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

It is our experience that a product that fails prematurely due to a manufacturing defect in materials or workmanship, will generally do so very early in the product's life cycle, often the first or second time the product is used. Products that are returned for warranty inspection after months or years of continuous reliable service are usually the result of normal wear and tear, which is not considered a defect in materials or workmanship and therefore is not covered by the warranty.

This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return within the time period set forth above prepaid with the original purchase receipt to:

Prime Wire & Cable, Inc.
ATTN: Timer Warranty
280 Machlin Court
City of Industry, CA 91789

Service - (888) 445-9955
www.primewirecable.com