



***INFERNO***

# Model 2714

## Instruction Manual



# TABLE OF CONTENTS

1 DESCRIPTION .....	1
2 POWER BUTTON USAGE .....	1
3 TOUCH-SCREEN NAVIGATION .....	2
4 U-Disk.....	2
5 USING MICRO-SD CARD .....	3
6 GETTING STARTED .....	3
HDMI video play .....	4
7 DESKTOP.....	5
8 SCREEN LOCK .....	6
9 PRE-LOADED APPLICATIONS .....	6
10 STATUS AND NOTIFICATION AREA .....	9
11 APPLICATION MANAGEMENT.....	10
Install Android Applications.....	10
Uninstalling Android Applications.....	11
12 WEATHER .....	11
13 CLOCK .....	12
Alarm .....	12
14 APP MARKET.....	13
Download Applications .....	13
App Market Function Menu .....	14
15 BROWSER.....	15
16 CALENDAR .....	15
Add Event.....	16
17 CAMERA.....	16
Take Pictures .....	16
Take Videos .....	17
Single-motion Panorama.....	17
18 CALCULATOR .....	17
19 MY RECORDER.....	18
20 EMAIL (for email services other than Google's Gmail) .....	18
Add Email accounts.....	18

Email Inbox .....	19
Edit Email Accounts .....	20
Delete Email Accounts .....	20
21 FILE BROWSER .....	21
Copy Media between Computer and Tablet.....	22
Connected to the local area network shared folders .....	23
Delete files .....	23
22 MY MUSIC .....	23
Play Music.....	23
Create Music Widget.....	24
The Operation with Music and Playlist .....	24
Sort by title or date added.....	25
23 MY VIDEO .....	26
Play Video .....	26
Create Video Widget .....	26
The Operation with Video .....	26
The Operation with Playlist.....	27
24 MY PHOTO.....	27
The operation with picture list.....	28
Slide show and settings .....	28
Doodle.....	28
Create Photo Widget .....	29
25 Gallery.....	29
Displays all photos and videos.....	29
26 SCREEN CAPTURE .....	30
27 TASK MANAGERMENT.....	31
Stopping Applications .....	31
Uninstall Applications.....	31
Install Applications .....	31
28 WI-FI.....	32
29 3G NETWORK.....	32
30 GPS .....	33
31 PPPoE SETTINGS.....	33
32 ETHERNET.....	33
33 SETTINGS .....	34

FREQUENTLY ASKED QUESTIONS .....	39
Technical Support .....	39
BATTERY MANAGEMENT .....	41
Charge battery .....	41
IMPORTANT SAFETY PRECAUTIONS .....	42
WARRANTY .....	43

---

# 1 DESCRIPTION



---

## 2 POWER BUTTON USAGE

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

**Reboot:** Press the power button and hold for 2 seconds → Tap **reboot**.

**Quickly Hibernate/wake-up:** Press the power button and hold for 2 seconds → tap **Hibernate** to enable the device to hibernate, or press the power button briefly to make the device to hibernate/ wake-up.

**Airplane mode:** Press the power button and hold for 2 seconds → Tap **Airplane mode**.

**Silent mode:** Press the power button and hold for 2 seconds → Tap 

**Vibrate mode:** Press the power button and hold for 2 seconds → Tap 

**Normal mode:** Press the power button and hold for 2 seconds → Tap 

**Force Off:** If device does not respond, press and hold the power button for 5 seconds.

**Warning: Force off could lead to unpredictable system errors and may be an indicator of possible service related problems.**

**Resetting your Inferno.** Press the reset button to reset the device. It will clear the all stored data and applications. (**Note:** after re-setting, you will need to manually turn on your Inferno)

---

### 3 TOUCH-SCREEN NAVIGATION

The capacitive touch-screen allows for quick, easy and convenient navigation for all applications.

**Tap:** Quick tap & release on an item on the screen.

**Touch & hold:** Touch and hold on one place for about 2 seconds, and then release to display an options window.

**Finger slide:** Touch & slide your finger across the screen and then release.

☆ *To avoid scratching or crushing, do not place objects on the touch screen surface. Note: Cracked screens are not covered by your Inferno warranty.*

---

### 4 U-Disk

#### **Insert U-Disk/Thumb Drive/USB**

Insert your storage device into the USB port transfer cable. When ready for use, enter into the file browser and switch to the USB folder to view it.

#### **Remove U-Disk/Thumb Drive/USB**

Close all applications or documents which have been opened on the U-disk.

Tap  → Settings → Storage → USB storage → Un-mount this storage device.

When displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

---

## 5 USING MICRO-SD CARD

☆ *The device supports a maximum 32GB micro SD card.*

Insert your card into the micro SD slot until it clicks into place.

### **Remove micro SD Card**

Close all applications or documents which have been opened on the card.

Tap  → **Settings** → **Storage** → **SD card** → **Un-mount this storage device**. When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid incompatibility.*

---

## 6 GETTING STARTED

### **Charge the device**

☆ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the status of "off").

### **Turn the device on**

Press the power button briefly.

### **Wi-Fi Network Setup**

Since many features require a Wi-Fi connection, we recommend you to set up your Wi-Fi network now.

1. Tap  → **Settings**.

2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Networks found. A lock indicates secure **Wi-Fi** networks that require input of password to connect.

1. Tap the desired network which you want to connect to → enter the **Network Password** if applicable → tap **Connect**.


2. Tap  to return to the Desktop screen.

☆ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

### **HDMI video play**

This device supports connecting with HD TV's through the Mini HDMI jack on your Inferno, Your TV and tablet will both display whatever is on your tablet screen. When using this feature, insert the optional Mini HDMI cable into the right side of the device interface to connect with TV.

## 7 DESKTOP

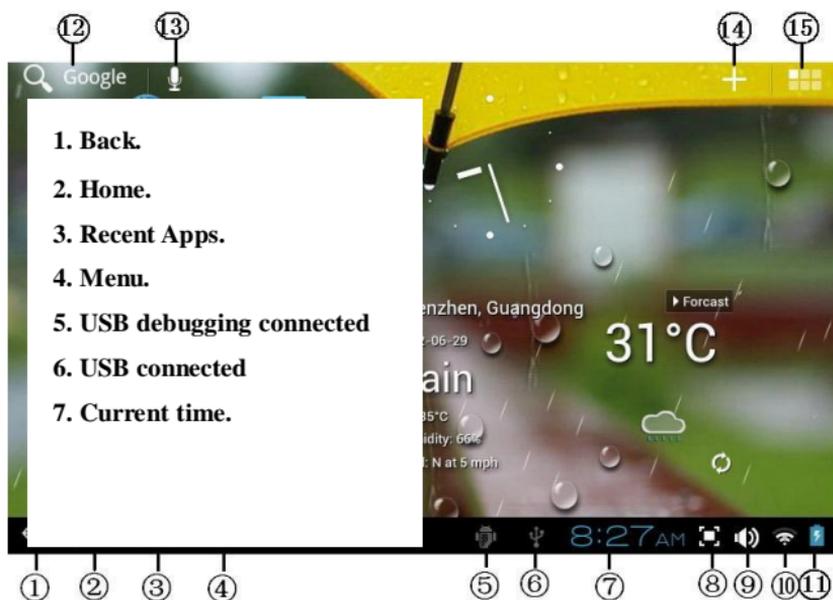

You can make many personalized operations through "add" icon , such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

★ *Tap on any application icon to launch it.*

★ *Touch, hold and then slide icons to reposition them on the screen.*


★ *Touch, hold and slide icons onto  to remove them from the **Desktop** screen.*

---

## 8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Lock screen displays the following:

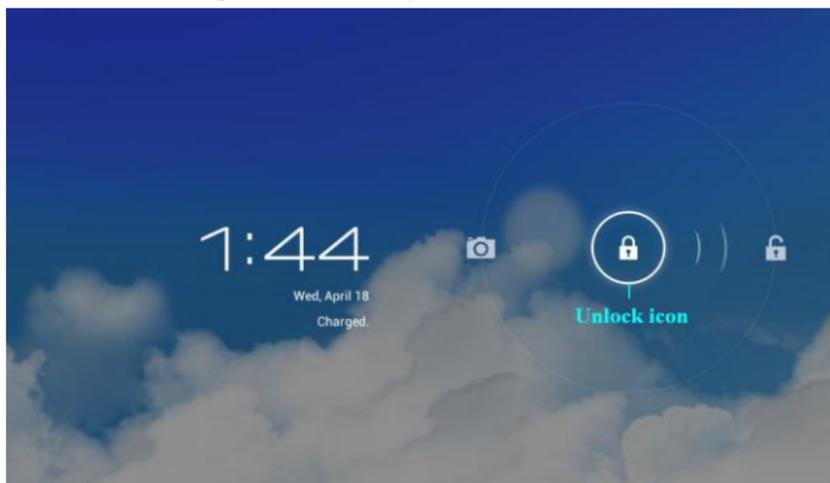

Tap the unlock icon and drop it to the right until out of the circle to unlock.

---

## 9 PRE-LOADED APPLICATIONS

	<b>Weather</b>	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	<b>Clock</b>	It can display the time and set the alarm.
	<b>App Market</b>	Downloaded applications quickly & easily.
	<b>Browser</b>	Access internet.

	<b>Calendar</b>	Calendar.
	<b>Camera</b>	Take normal photos, panoramic photos and take video.
	<b>Calculator</b>	Do calculation.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>File Browser</b>	File manager application for viewing and managing files and apps. Install Android apps and backup files to your SD card.
	<b>My Music</b>	Play and manage audio files.
	<b>My Video</b>	Play and manage video files.
	<b>My Photo</b>	View and manage photo files.
	<b>Gallery</b>	Play, view, and manage video and photo files.
	<b>Picture Capture</b>	Capture image of the screen.
	<b>Task Manager</b>	Application manager for managing processes.
	<b>Voice search</b>	Voice search.

	<b>Flash Player Settings</b>	Flash player settings.
	<b>Downloads</b>	View the downloads and the downloading progress.
	<b>Search</b>	Local search and on line search.
	<b>Settings</b>	Multiple settings for personalizing and enhancing your <i><b>INFERNO.</b></i>

☆ To move an icon to the **Desktop** screen, touch & hold the icon, and then release it when it appears on the **Desktop** screen.

☆ Touch, hold and then slide icons to reposition them on the screen.

☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

## 10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which are in the state bar to view more state information and events.



<b>Airplane mode</b>	Disables all wireless capabilities
<b>Wi-Fi</b>	Access to Wi-Fi settings interface.
<b>Auto-rotate screen</b>	Auto-rotate switch. The screen will automatically rotate to Landscape or Portrait mode
<b>Brightness</b>	Set screen brightness.
<b>Notifications</b>	Open or close the notification.
<b>Settings</b>	Access to settings.

---

## 11 APPLICATION MANAGEMENT

### Install Android Applications

Your *INFERNO* offers a wide choice of application markets. Purchased or free Android applications that you have downloaded directly from the web to your home computer can be installed quickly & easily on your Tablet using the



**File Browser** or **task manager** application.

1. Copy the **.apk** files which you want to install onto an SD card or USB device → insert or connect to your Device.

2. Tap the  **File Browser** application icon.

1. Tap  or  and locate the folder in which the .apk

application files were saved.

2. Tap on an **.apk** file → **Install**.

The application is installed and the application icon is added to the

**Applications** screen.

3. Tap **Open** to launch the application now, or tap **Done** to return to the

**File Browser** screen.

### Download Android Applications directly from a Website

You can download Android applications directly from websites, and then install them on your device quickly and easily.

1. Tap the  **browser** application icon to launch the internet.

2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.

3. After the downloading is completed, tap  → **Downloads**. Open

the applications from app list.

### Uninstalling Android Applications

You can also uninstall the Android applications quickly and easily that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.

2. Tap the application you want to uninstall → **Uninstall**.

3. Tap **OK** to confirm the Uninstall.



---

## 12 WEATHER

Tap the  **Weather** application icon.

### General setting

You can set Temperature Unit (°C), Update frequency .

### About

View software version number and relevant legal information.

### Add city

You can add you city to **Weather** and view the city's weather information.

### Select city

In the list of cities, click the city to view the weather information. Select the city and tap  to delete the city, tap  refresh the weather

information.

Weather can be displayed on the **Desktop** through adding its widget. The way

is: tap  → **Widgets** → **Weather Widget**.



## 13 CLOCK

Tap the  **Clock** application icon. You can see the time and date.

### Alarm

You can use your device as an alarm clock and can even have a choice of multiple alarms.

### Add Alarm

1. Tap the  **Clock** application icon.

2. Tap  **Set alarm** → **Add alarm**.

3. Set up your alarm as desired.

4. Tap **OK**.

5. Selected the alarm clock.

### Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

Tap **Dismiss** to cancel the alert.

### Turn Alarm on

1. In the Alarm list, find the desired alarm.
2. Click the  on the left.
3. After the  change to , tap **Done**.

### Edit Alarm

1. Tap the  **Clock** application icon → Click .
2. Tap on the alarm you want to edit → make desired edits.
3. After editing, tap **OK**.

### Delete Alarm

1. Tap the  **Clock** application icon → Click .
2. Tap on the alarm you want to delete.
3. Tap **Delete** → **OK**.

Tap  to return to the **Desktop** screen.



---

## 14 APP MARKET

Your *INFERNO* offers a wide choice of application markets. Among these may be the Amazon Marketplace, Slide Me and Google Play store. These have many applications that you can quickly and easily download to your Tablet.

### Download Applications

1. Tap the  **App Market** application icon.

☆ *The first time, it will prompt “**Register**” and “**Login**” options. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.

3. Tap on an application → **Download**.

4. After the app is downloaded, tap **Install**.

5. Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

### **History**

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

### **App Market Function Menu**

Tap  to display the App Market Function Menu.

### **Profile**

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

### **About**

Displays App store version and support information.



## 15 BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop, and then you can open the Web browser.



## 16 CALENDAR

Tap the  **Calendar** application icon.

Before using the **Calendar**, you need to add a Google account. If you do not have one, please go the Gmail icon to begin the application process. Enter account email address and password. Enter the system **Settings** → **Account &**

sync → **Add account**. Complete the setting according to the prompts.

### Add Event

1. On the **Calendar** screen, tap on the date when you want to add an event.
2. Tap on the event time → tap  .
3. In each field, enter the details of the related activities.
4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*



## 17 CAMERA

Tap the  Camera application icon.

### Take Pictures

1. Tap  switch to camera, and you can take picture.
2. Tap  to take a picture.
3. The picture will be saved.
4. Tap the picture thumbnail  to enter **My Photo** to scan the

picture.

1. Press **Back** to the **Camera**.
2. Tap  to exit the **Camera** and back to the **Desktop**.

## Take Videos

1. Tap  switch to video, and you can take videos.

2. Tap  to begin and tap  to stop.

3. The video will be saved.

4. Tap the video thumbnail  to play the video.

5. Press **Back** to the **Camera**.

6. Tap  to exit the **Camera** and back to the **Desktop**.

## Single-motion Panorama

For capturing larger scenes, tap  icon and switch to

single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide as a perspective needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

**Note:** You can tap  on the top left of the interface to choose the

files are stored in the ROM (internal flash memory), SD card or USB storage.



---

## 18 CALCULATOR

1. Tap the  Calculator application icon.

2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



---

## 19 MY RECORDER

1. Tap the  recorder icon.
2. Tap the  record icon to start recording.
3. Tap the  record icon to stop record.
4. Tap the  play button to play the voice of recording.



---

## 20 EMAIL (for email services other than Google's Gmail)

☆ *POP3 and SMTP accounts are supported.*

### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your tablet.

1. Tap the  **Email** application icon.
2. On the **Account setup** screen, enter your email address in the **Email address** entry field.

3. Enter your email password in the **Password** entry field

4. Tap **Next**.

**5. Manual Setup** (*optional*): The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc.*). However, some email services may need to be manually set. We recommend that you go on line to find your email providers and Google their incoming and outgoing settings. You can also check with us at [tablet.support@comcast.com](mailto:tablet.support@comcast.com) for more information.

If you need to change the server settings, tap **Manual Setup** to make necessary changes.

6. According to the selected mailbox server, enter or select the parameter and server type and then Tap **Next**.

7. Optional: Enter a name for the account.

8. Enter name for outgoing message → tap Done.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

### **Email Inbox**

1. Tap the  **Email** application icon.

2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.

3. Tap on the desired email account → tap **Inbox**.

### **Open Email Message**

1. On the **Inbox** screen, tap on an email to open it.

2. For attachments, tap **Open** to launch appropriate application, or tap

**Save** to save attachment to a SD card.

3. To replay, tap  **Reply** or  **Reply all**.

a. Tap in the Compose Mail entry field to enter your reply message.

b. Tap Send to send immediately, Save as draft to save without send or

Discard to discard without saving or sending.

- c. To delete the email immediately, tap **Delete**.

### Compose New Email Message

1. On the Inbox screen, tap  .

2. Enter the e-mail address in the recipient field. If you want to add Cc or Bcc recipients, tap  → **Add Cc/Bcc** , and then enter the recipient's email address.

1. Tap in the **Subject** entry field to enter your desired subject title.
2. Tap in the **Compose Mail** area to enter your personal message.

3. If desired, tap  →  to attach a file.

4. When ready to send the email, tap  .

### Edit Email Accounts

1. Tap the  **Email** application icon.

2. On the Inbox screen, tap  → **settings**.

3. Set your desired preferences to customize your email account.

4. Tap  to return to the Inbox screen.

### Delete Email Accounts

☆ *If you have multiple accounts, and you wish to delete the account designated as the default account, the next email listed will be automatically set as the default.*

1. Tap the  **Email** application icon.

2. On the **Inbox** screen, tap  → **Settings**.

3. Click the account you want to delete.
4. In the pop-up **Account options** window, tap **Delete**
5. Tap **OK** to confirm the deletion.

### **Set Default Email Account**

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.

2. On the **Inbox** screen, tap  → **Settings**.

3. Tap the desire account.
4. In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



---

## **21 FILE BROWSER**

- Tap the  **File Browser** application icon to view the files on all

storage devices (*Internal memory, SD card, USB device*), and to install Android applications on your tablet quickly & easily .

Use the icons across the top of the screen as follows:

 Internal Flash (ROM)

 SD Card

 USB Storage

 Paste

 Back to the previous folder

 Switch folder display mode.

 Menu

### Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

★ *The internal device storage is titled "ROM", memory card "SD" and USB storage device are titled "USB".*

★ *The instructions below are for copying from an SD card or USB storage device into the device. You can use the same method to copy from the device to an SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **Go To**, select  or  to display the contents of your

storage device.

2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desired → tap **Copy**.

3. Tap **Go To**, select  Internal Memory → tap on the folder into which you want to copy the file → tap .

### Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.
2. Tap  **Net share** → **Add new sharing point** → **Choose the mode used of sharing** → **Editor of network folder sharing**.
3. After connecting successfully, enter **network sharing settings** and open the list of shared folders directly.

### Delete files

Tap and hold a folder/file and enter into the multi-selection mode, select the folder/file as desired → tap **Delete** → **OK** to confirm the deletion.



---

## 22 MY MUSIC

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

### Play Music

1. Tap the  **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.


3. To stop the music, tap the **Pause**  icon.

4. When you are playing the music, you can tap  or  to

return to the previous screen.

Click  switch to the currently playing interface, It is shown as

follows:

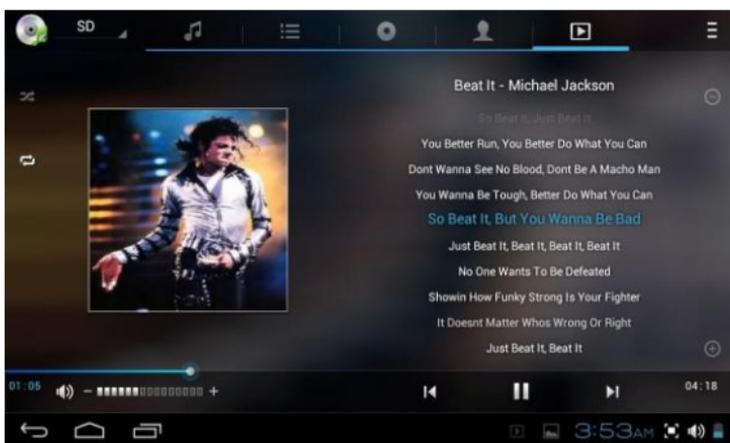

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

### **Create Music Widget**

**Play the music quickly through the Music Widget.**

Tap  icon on the desktop, In the pop-up list select **Widgets** →

Select **Music Widget**.

### **The Operation with Music and Playlist**

**Add playlist**

1. Choose  to enter the playlist interface → click .

2. Input the playlist name.

3. Tap **Save**.

### **Rename or Delete playlist**

Switch to **display mode**, Tap the playlist → tap  → Enter a new

name in the dialog box, and click **Save**. If you want to delete the playlist,

click  → click **save**.

### **Add music**

1. In the **all song**, **album**, and **artist** list, tap the music and hold for switching to multi-select mode.

2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).

3. Tap **Add to playlist**, and then select a playlist.

### **Delete music**

Tap and hold on the music you want to delete → tap **Delete**.

### **Sort by title or date added**

In the all song interface, click the  on the upper right, select **sort by title** in the pop-up list, then click the "alphabetical" of the right hand, the songs interface will be sorted quickly according to the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will sorted by add date.



## 23 MY VIDEO

☆ *Video file formats supported: MPEG1/2/4, H263, H264 VC1, Real Video, Motion JPEG. The largest video format is supported 1080P(1920×1080) resolution.*

### Play Video

1. Tap the  **My Video** application icon.

2. Select the video from ROM, SD card or USB.

3. Tap screen and click the related icon to adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).

4. Tap **Back button** or  to return to the **My Video** screen.

### Create Video Widget

**Quickly play the video through the Video Widget .**

On the desktop tap  icon, select **Widgets** in the pop-up list →

Select **Video Widget**.

### The Operation with Video

#### Zoom video screen

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

#### Setting video display mode

Tap  icon, the video screen can be set as "full screen, actual size,

best fit" three modes.

## Audio track and subtitle switching

In the video player interface, click  icon on the top right to switch

audio track and subtitle.

## The Operation with Playlist

### Classification of video list

In the root directory, click the **album (times)** on the top left to classify the video.

### Switch display mode in the classification folder

In the classification folder, click  and  icon to set list display

mode or album display mode.

☆ In the classification folder, users can click  to

classify the video by time or name.

### Send or delete the video in the list

Tap and hold the video, →click the **option** or **delete** button on the top right of the screen to send or delete the video.



## 24 MY PHOTO

☆ Photo file formats supported: JPG, JPEG, BMP, and PNG.

1. Tap the  My Photo application icon.

2. Tap on the desired photo, to view individual photo.

3. Click  on the top right screen to operate the corresponding

photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, showing details)

## The operation with picture list

### Classification of photo list

In the root directory, click the **album (times, Locations, people, or tags)** on the top left to classify the photo.

### Delete the photo in the list

Tap and hold the video → click the **delete** button on the top right of the screen to delete the photo.

### Slide show and settings

#### Enter the slide's setting

1. Tap the  **My Photo** application icon.

2. In the root directory, click the  on the top right → **setting**.

3. In the settings interface, set the **Filter photo by file size, slideshow speed, and slideshow mode**.

#### Slide show

1. Tap the  **My Photo** application icon. Click the photo folder.

2. Click  → **slide show**.

☆ *In the classification folder, users can click  and classify the photo by time, color or name.*

#### Doodle

☆ You can do doodle in **My Photo** interface.

1. Open the picture.

2. Click the  icon → Select **My Photo**.

3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop. (**Note:** It will missing brush function if you choose the **Gallery**)
4. After finishing the doodle, click the **save** icon.
5. Click the  icon to return to picture browsing interface.

### Create Photo Widget

Through the Photo Plug-ins can quickly open the photos.

Tap  on the desktop, select **Widgets** in the pop-up list → Select

**Photo Widget.**



## 25 Gallery

**Displays all photos and videos.**

**Classification of photos and videos list**

In the root directory, click the **album (times, Locations, people, or tags)** on the top left to classify the photos and videos.

**View, play the photos and videos**

**Photo:** In the classification folder, click on the photo thumbnails to open the photo, and on the top right of the folder interface tap  icon to play slide.

**Video:** In the classification folder, click on the video preview, enter the video preview interface, and click the play button in the video preview to play the video.

**Delete the photos and videos in the list**

On the top right of the screen, Tap  icon → Tap **select album** or

**Select item**, then select the photo or video which you want to delete, tap 

→ **Delete**.

☆ **Gallery** only supports the display and manages photos and videos in the **default reading/writing storage**. To toggle the display of the storage area, go to **Settings** → **storage** → **default reading/writing storage** to make changes. The device default storage area is a micro SD card.



## 26 SCREEN CAPTURE

You can capture a screen image by tapping  at any time.

Tap the  **Screen Capture** application icon to set options for a

screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.

After the images are saved, they can be viewed through



**My**

**Photo** application.



## 27 TASK MANAGERMENT

Use PK Manager to manage applications and widgets.

### Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

**Note: Stopping unneeded applications helps to prolong your battery run time.**

1. Tap the  **Task Manager** Application icon.
2. Tap **Running** to display all running applications.
3. Tap on an application you want to stop → tap **Force stop** → **OK**.

### Uninstall Applications

1. Tap the  **Task Manager** Application icon.
2. Tap **All** to display all applications.
3. Tap on an application you want to uninstall → tap **Uninstall**.
1. Tap **OK** to confirm uninstall.

### Install Applications

2. Tap the  **Task Manager** Application icon.
3. Tap **Install** to display all applications and folders.
4. Find and tap on an application you want to install → tap **Install**.

---

## 28 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.

2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;

3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;

4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;

5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;

6. When internet connections are successful, the wireless connection icon will appear in the bottom status bar.

---

## 29 3G NETWORK

If you want the ultimate in one line capabilities, or live in an area where Wi-Fi may not always be available, you may want to consider purchasing a 3G Broadband card. These can be found through your cell phone supplier and in many retail store locations as well. These cards plug into you **INFERNO** via the included USB adaptor cable.

Tap **Settings** → **3G network**, And tap "Add 3G network", in the popup dialog box, Fill the **name**, **Device number**, **APN**, **user** and **password** information.

**Name:** In the popup dialog box, Name field enter the name.

**Device number and APN:** Please fill in the information provided by

operating agencies.

Click the connect after finishing filling, then you will see the 3G symbol

 appearing at the bottom of status bar , indicating the 3G network is

connected, and then you can get online.

---

## 30 GPS

GPS functionality requires the use of a USB interface external GPS receiver. (It connects to your *INFERNO* via the USB transfer cable).

Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide). For the currently supported GPS receiver type, please refer to Appendix.

---

## 31 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .
  2. Input name and password then click connect to access the broadband network.
- 

## 32 ETHERNET

If WI-FI is not available, but an internet modem is, you can connect via an Ethernet cable. Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network

cable plugged into the USB network card, you will see the bottom of status

bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.

2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.



### 33 SETTINGS

<b>Wireless &amp; networks</b>	<b>Wi-Fi</b>	Turn on /off Wi-Fi, Set up & manage wireless access points.		
	<b>Ethernet</b>	<b>DHCP</b>	Automatic assign IP address	
		<b>Use Static IP</b>	Manual assign IP address	
	<b>PPPoE settings</b>	Set up ADSL network		
	<b>3G network</b>	Set up 3G network.		
	<b>Data usage</b>	View of data usage		
	<b>More...</b>	<b>Airplane mode</b>	Disable all wireless connections.	
		<b>VPN</b>	Add Virtual Private Networks (VPNs).	

		<b>Mobile network</b>	Set up mobile network
<b>Device</b>	<b>Sound</b>	<b>Volumes</b>	To adjust the Media volume.
		<b>Default notification</b>	Select desired ringtone sound.
		<b>Vibrator</b>	Turn on/off vibrator
		<b>Touch sounds, screen lock sound</b>	Turn on/off operating sounds.
	<b>Display</b>	<b>Brightness</b>	Adjust the screen brightness as desired.
		<b>Wallpaper</b>	Set up wallpaper
		<b>Auto-rotate screen</b>	Auto-rotate switch.
		<b>Show full-screen gesture tip</b>	Full-screen gesture prompts
		<b>Screen timeout</b>	Adjust the delay before the screen automatically turns off.
		<b>Font size</b>	Set the system font size

	<b>Storage</b>		View, uninstall, and format the internal memory, SD card and USB storage.
	<b>Battery</b>		View the usage of the battery.
	<b>Apps</b>		View and uninstall applications
<b>Personal</b>	<b>Account &amp; sync</b>		Add sync account.
	<b>Location services</b>	<b>Google's location service</b>	Let apps use data from source such as Wi-Fi and mobile network to determine your approximate location
		<b>GPS satellites</b>	Let apps use GPS to pinpoint your location.
		<b>Location &amp; Google search</b>	Let Google use your location to improve search results and other service.

	<b>Security</b>	<b>Screen lock</b>	
		<b>Owner info</b>	
		<b>Encrypt tablet</b>	Require a numeric PIN or password to decrypt your tablet each time you power it on.
		<b>Make passwords visible</b>	
		<b>Device administrators</b>	View or deactivate device administrators
		<b>Unknown sources</b>	Allow installation of non-Market apps.
		<b>Trusted credentials</b>	Display trusted CA certificates.
		<b>Install from SD card</b>	Install certificates from SD card.
		<b>Clear credentials</b>	Remove all certificates.
	<b>Language &amp; input</b>	<b>Language</b>	Setting system language.

		Spelling correction, personal dictionary, keyboard and input methods, text to speech (TTS) output, and pointer speed.	
	<b>Backup &amp; Reset</b>	<b>Factory data reset</b>	Erases all data on tablet.
<b>System</b>	<b>Date &amp; Time</b>	<b>Automatic date &amp; time</b>	Use network -provided time
		<b>Set date</b>	Set date
		<b>Set time</b>	Set time
		<b>Select time zone</b>	Select time zone
		<b>Use 24-hour format</b>	Choose 24-hour format or 12-hour format.
		<b>Select date format</b>	Select date format.
	<b>Accessibility</b>	Large text, power button ends call, auto-rotate screen, speak passwords, touch & hold delay, and install web scripts	

	<b>Developer options</b>	USB debugging, development device ID, stay awake, allow mock locations, HDCP checking, desktop backup password, strict mode enabled, pointer location, show touches, show screen updates, show CPU usage, Force GPU rendering, window animation scale, transition animation scale, don't keep activities, background process limit, and show all ANRs.
	<b>About tablet</b>	Status, legal information, model number, android version, kernel version and build number.

---

## FREQUENTLY ASKED QUESTIONS

### Technical Support

**Q: How do I get technical support?**

The best way to obtain fast domestic support is to email us at [tablet.support@comcast.net](mailto:tablet.support@comcast.net). We usually respond in less than one business day. You may also contact us at (312) 473-0756 M-F between the hours of 9:00 AM – 5:00 PM central standard time.

### Android

**Q: What Android OS version is on my Device?**

A: 4.0.3

### Basic Device Functions

**Q: Do I have to charge the battery before use?**

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Use the included power adapter to charge; this device does not support charging via USB.

## **Email**

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

## **Media Cards**

**Q: Which media cards are compatible with my Device?**

A: micro SD cards.

## **Music**

**Q: What type of music files can I play on my device?**

A: MP2, MP3, WAV, FLAC, APE, AAC, WMA

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## **Photos**

**Q: What type of photo files can I view on my device?**

A: JPG, JPEG, BMP and PNG

**Q: How do I add photo files to my device?**

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Video

### **Q: What type of video files can I play on my device?**

A: Video file formats supported: MPEG1/2/4, H263, H264, VC1, Real Video and Motion JPEG. The largest video format is supported 1080P (1920×1080) resolution.

### **Q: How do I add video files to my device?**

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Wi-Fi

### **Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device. However, you will need access to a wireless WI-FI Router.

---

## BATTERY MANAGEMENT

The battery is not fully charged when you use the device first time, so it is recommended that you charge the battery for at least 6 hours before you use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by the suggestions as below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### **Charge battery**

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours

in the status of "off").

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the status of "off", but you can use the device while plugged in when desired.

**NOTE: To prolong your battery run time, turn off all unneeded running tasks including WI-FI and reduce your screen's brightness to a comfortable level. High screen brightness is the major cause of short run times. Your Inferno should run between 2-3 hours and more than 10 hours in the hibernate mode.**

---

## IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your tablet. This will reduce the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Avoid being stepped or don't put object on the power cord when make charging. Pay more attention to the point where the cord attaches to the device.
- Please use only "switching" AC adapter included in your *INFERNO* packaging. Using any other power adapter voids your warranty.
- Do not disassemble the device by yourself. Any evidence of tampering voids your warranty.

### **Cleaning your device**

Treat the screen gently. Please use soft, non-abrasive cloths such as a camera lens cloth to clean fingerprints or dust on the screen.

# **1 YEAR FREE EXCHANGE WARRANTY**

THIS IS YOUR *INFERNO* ONE YEAR LIMITED WARRANTY (VALID IN THE CONTINENTAL UNITED STATES, ALASKA, HAWAII) YOU MUST PRESENT THIS FORM TOGETHER WITH PROOF OF PURCHASE AND PROOF OF PURCHASE DATE (BILL OF SALE) TO OBTAIN WARRANTY SERVICE. This tablet computer is warranted by Fusion Sales and Marketing to be free from defects in material and workmanship for one (1) year from the date of purchase. Please send us an email telling us the model you own, purchase date and serial number at [tablet.support@comcast.net](mailto:tablet.support@comcast.net).

During this period if this product is found to be defective in material or workmanship, will at our option, either repair or replaces this product without charge, subject to the following conditions, limitations and exclusions:

1. This warranty extends to the original consumer purchaser only and is not assignable or transferable.
2. This warranty shall not apply to any Product which has been subjected to misuse, abuse, abnormal use, negligence, alteration or accident, or has had its serial number altered or removed.
3. This warranty does not apply to any defects or damage directly or indirectly caused by or resulting from the use unauthorized replacement parts and/or service performed by unauthorized personnel.
4. This warranty does not apply to the internal battery and the software drivers that accompany this product.

5. At our digression, we will repair or replace your tablet with either your exact model or, if that model no longer exists, with the closest version of a current INFERNO or MOBI model. We reserve the right to replace your tablet with a quality factory re-certified model.

THIS WARRANTY IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS ON THE PART OF FUSION SALES AND MARKETING, INC. PROVIDED, HOWEVER, THAT IF THE DISCLAIMER OF IMPLIED WARRANTIES IS EFFECTIVE UNDER APPLICABLE LAW, THE DURATION OF ANY IMPLIED WARRANTIES ARISING BY OPERATION OF LAW SHALL BE LIMITED TO ONE (1) YEAR FROM THE DATE OF PURCHASE OR SUCH LONGER PERIOD AS MAY BE REQUIRED BY APPLICABLE LAW.

FUSION SALES HEREBY DISCLAIMS ANY AND ALL LIABILITY FOR CONSEQUENTIAL AND INCIDENTAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH ANY BREACH OF THIS WARRANTY OR ANY OTHER CLAIM WITH RESPECT TO THIS PRODUCT, INCLUDING BUT NOT LIMITED TO, CLAIMS OF NEGLIGENCE, STRICT LIABILITY IN TORT OR BREACH OF CONTRACT.

SOME STATES DO NOT ALLOW (A) LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR (B) THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS

WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

In order to obtain performance of the above warranty obligations, the original purchaser must return the Tablet Computer product together with proof of purchase date (bill of sale) addressed to

Fusion Sales and Marketing, Inc.

1745 North Marcey Street

Product Area 3602

Chicago, Illinois 60614

In returning this product for repair or replacement under this warranty, the original consumer purchaser must prepay all postage, shipping transportation, insurance and delivery costs, and the product must be delivered in either its original carton or a similar package affording an equal degree of protection. Fusion ales will not be responsible for any loss or damage incurred in connection with the return of this product.