

To take a video with Manual turn on and shut off:

-Insert the Micro SD card (cannot be bigger than 16 GB). Make sure it is in the slot when inserting, if it goes in crooked, it is not in the slot.

-Press the power button on the side of the device.

-A blue light will appear at the top of the device and it will flash.

-At the top of the device is a grey start/stop button sticking slightly out. Press that to begin recording. A red light will flash steadily at the top of the device by the blue light. That's how you know it's continuing to record.

-To turn it off, press the grey button on the top again. The recording will automatically save once the red light is done flashing.

This has a function for recording length to be determined by sound instead of turning it on and off.

Sound Control Video:

-Insert Micro SD card

-Press power button on the side of the device.

-A blue light will appear at the top of the device and will be flashing.

-Press Mode button on the other side of the device until a red flashing light appears next to the blue light.

-Red light will flash during the whole recording.

\*\*This option allows the camera to continue recording as long as it picks up sound. After 2 minutes of no sound recorded, the device automatically turns itself off and saves the recording. If before that time is up you choose to end recording, follow directions below.

-To turn off the device just press the mode button until the lights stop flashing and press the power button to turn the device off.

To check recordings:

-Press on the memory card to release it from the device. Put it into a Micro SD card adaptor (**not included**) and put it in your computer. From there you can access all the videos taken on your device. Once you're done moving them or deleting them, take the Micro SD card out of the adaptor and put it back in the device and you're ready to go all over again!

\*\*Recordings can also be checked simply by leaving the Micro USB card in the device and plugging the device into the computer using the USB cord and following the directions for opening the file prompted by your computer.

To use as a webcam:

-Plug the device into the computer using the attached cord, making sure the Micro SD card is not in the device.

-To turn on the webcam, press the power button on the side of the device. Once it blinks blue and red at the top, it is turned on.

-To turn off or disconnect, press the power button on the side of the device until the lights disappear.