



MANUAL

1. Opening the lid: lift the lid, add water without tilting the appliance.

2. Add water: Do not exceed the "Max" line when filling the water tank.

3. Add essential oil: Pour the essential oil into the water tank, 6 to 8 drops maximum (about 0.3 to 0.5 ml).

4. USB connection: Insert the USB plug into the dc jack, and then lay the unit flat.

5. Connecting the power cable: Plug the USB cable into the power adapter or connect to a computer or portable charger.

6. Press the right button to start the LED light, the color will change slowly by itself; press the button a second time to turn the light off.

7. Press the left button to spread a mist continuously. The unit turns off automatically when the amount of water is no longer sufficient.

- Right button: color light
- Left button: mist
- The volume of the mist depends on the environment of the room and the volume of water in the tank.

- Due to water temperature and external factors, the volume of the mist will be lighter when the unit is turned on, then will be smoother as the minutes go by.
- Due to air temperature, humidity and air circulation, the mist may not be visible. This is a normal phenomenon.
- This unit has an automatic shutdown function. It turns off automatically when there is no more water or the water level is too low. At the same time, the unit switches off automatically.

WARNINGS

Please read the following precautions carefully.

- Do not disassemble the appliance while it is running, this will produce splashing water.
- It is recommended to use water at normal temperature or pure water, mineral water or purified water. Do not use unknown liquid or high concentration liquid.
- In order to avoid abnormal or no mist misting, the volume of water must not exceed the maximum line of the water tank.
- Do not tilt the appliance when you fill it with water to prevent water leakage and water spills into the appliance

through the air outlet that could cause mechanical failure.

- Do not touch the atomizer contained in the tank directly with your hand.
- Keep the air outlet facing up when you empty the water to prevent water from entering the air outlet and causing faults.
- When the room temperature is too high, the mist may form water droplets in front of the mouthpiece. If this happens, please place a cloth in front of the mouthpiece.
- When the machine is used in low temperature or high humidity, fog may form around the fog nozzle. It is normal to see drops of water forming on the lid; use a towel to clean it.
- Use a soft cloth to clean the inside of the water tank and the spray tip. To prevent breakdown, clean the unit every 5 to 6 uses.
- When servicing the unit, unplug the power plug to shut off the power.
- If you do not use the machine for a long time, empty the water from the tank and clean it and store the unit once dry.

HELP

If a malfunction occurs, read the following statements before attempting any repairs.

1. The device does not switch on: Check that the cable is securely plugged into the device and into the socket. In case, try unplugging and reconnecting the plug.
2. The unit turns off when it is plugged in: The unit turns off automatically if

there is not enough water in the tank. Check the amount of water and add if necessary.

3. No haze or mist abnormal: 1. Check that the tip of the diffuser is clean; 2. Check that there is not too much or too little water in the tank and adjust the amount of water until you get a normal mist. 3. Check that the outer and inner covers are installed correctly. Otherwise, reassemble the unit by placing the covers correctly. If they are poorly assembled, the mist will not reach the diffuser tip.
4. Check the cleanliness of the air outlet. If it is dirty, the air volume will be reduced and the unit will not be able to emit mist. 5. Temperature, humidity and environmental factors can reduce the visibility of the mist. If you do not see a mist but the unit and the air outlet are working normally (you can hear the motor), it means that there is no problem with the unit. 6. Check the compatibility of the AC adapter.
5. Water leak: 1. Check that the top cover is correctly installed, as well as the inner cover. Otherwise, reassemble the device properly.
2. When the inner and outer covers are improperly installed, the mist can not come out and this creates droplets. 3. Lower temperature surroundings can cause condensation

SPECIFICATIONS


Name Ultrasonic humidifier (aroma diffuser)
Voltage: DC 5 V \geq 800 Ma
Power: 4-5W
Tank volume: 4.7 oz
Electrical cable: 3.2 feet
Area of application inside: about 10 to 13 m²

READ AND FOLLOW ALL LABEL CAUTIONS AND WARNINGS


- Keep out of reach of children and pets
- Do not use on babies, children or pets
- Keep away from flame, heat and ignition sources (essential oils are flammable)
- Do not ingest essential oils
- Keep essential oils out of eyes, ears, nose, mouth and any body opening
- Do not apply undiluted (neat) essential oils directly onto skin
- Never assume an essential oil possesses the same properties as its plant
- * If you have sensitive skin, epilepsy, heart or kidney problems, or any serious medical condition, do not use essential oils unless advised by a physician or medical professional that it is safe.

ecobloom Spa

1. Steam outlet
2. Diffuser cone
3. Water tank
4. Max. water level line
Discharge Water Indicator
5. On / Off button
6. LED button
7. Power input
8. Air hole
9. USB cord

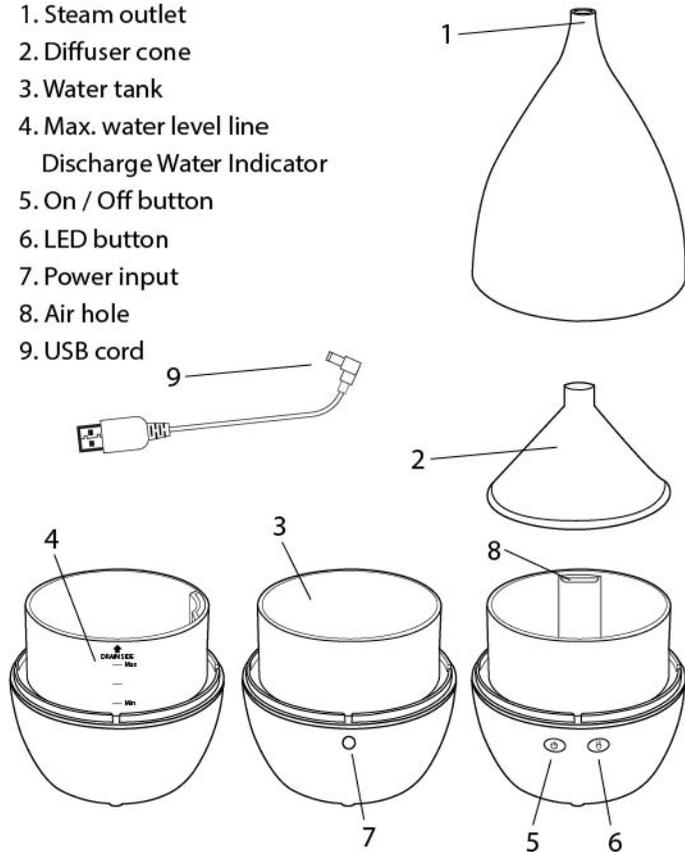

Installation :

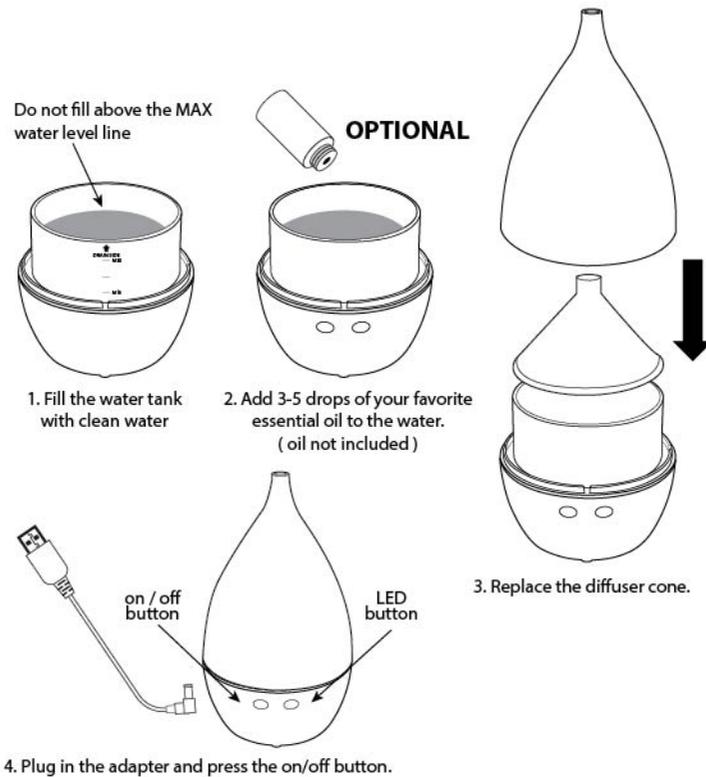

Maintenance :

