 



Set Tyre Pressure

Press "R" to switch the unit, press "+", "-" to increase or decrease the value, wait a few seconds after setting. When the number stops flashing, turn on the inflation switch and start working. When the air pressure reaches the specified level, the pump will stop automatically, please turn off the switch.

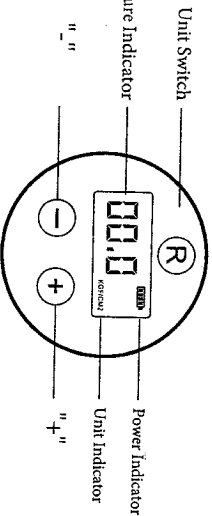

Air Nozzle Set

 For different products



Advantages

1. Hand-held air pump for easier operation.
2. Three operation buttons, precise digital readout.
3. Metal cylinder body, fast heat dissipation and long service life.
4. Fast air refill and low noise when working.
5. LED light, more convenient to use at night.
6. Preset tire pressure, automatic filling and stopping.

Warning

1. Please fully charge before use.
2. Please lock the safety catch when it is not in use to avoid activation.
3. Do not disassemble the product without permission.
4. Do not place near a heat source, such as the exhaust port of a car.
5. The normal operation of the product will cause the product to heat up slightly, which is normal.
6. To ensure that the pump works well, the continuous filling time should not be too long, if you need to run for a long time, take intermittent breaks.
7. If the product is not used after starting, the power will be automatically cut off after 40 seconds.

Warranty


Name	Phone
Address	
Email	Whatsapp
Date	Status

About

1. This warranty card should be kept by the user for warranty proof, no replacement will be issued if lost.
2. Three months from the date of purchase is the warranty period, within the warranty period, due to product quality problems, the user can use this card with the purchase invoice or a copy of the invoice, contact our company or local dealers, our company is responsible for the "three packages".
3. Non-quality problems are not included in the three guarantees.


Car Tire Inflator

User Manual

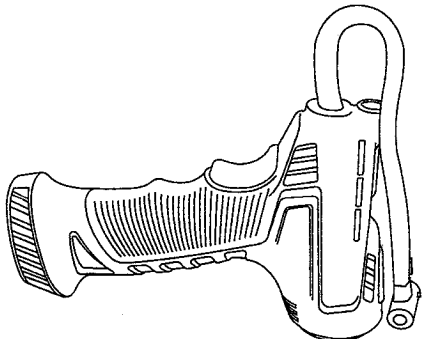

Read this manual carefully before use.

Product Parts

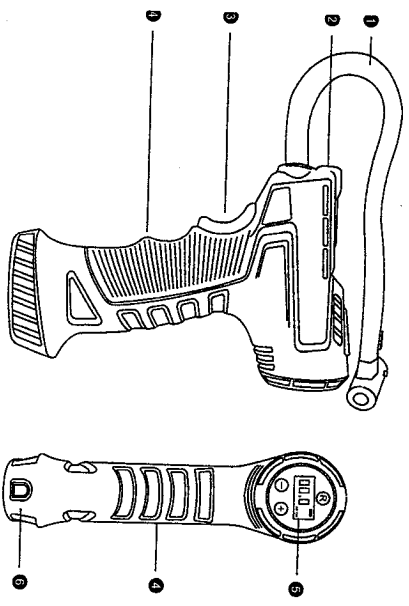

- 1 Inflation Tube
- 2 Start Button
- 3 Tire Pressure Gauge
- 4 LED Light
- 5 Handle
- 6 Charging Port

ACCESSORIES



Charging Cable

*USB for Cordless and Cigarette Lighter for Cord one



Air Nozzle Set

Specification

Item	ABTG-117
Material	ABS
Size	170*235*60mm
Power	120W
Voltage	11.1V
Inflating Time	4 MIN 30 SEC
Functions	Tire Inflator/Light/Tire Pressure

Tire Pressure Suggestion



To Pump the Tire

1 ENGINE START STOP

Start the engine

2 [Image of charging cable]

Plug in the charging Cable

3 [Image of pressure gauge]

Set tire pressure

Cordless one starts from this step

4 [Image of inflator tube]

Screw the other end of the inflation tube to the valve of the tyre, and lock it.

5 [Image of start button]

Press the start button

6 **FINISHED**

The tyre inflator will stop automatically.

Warning

1. Cordless one starts from step 3.
2. Do not use it in direct sunlight or under high temperature or pressure.
3. Please ensure that the switch is switched off before charging, never use it while charging.