


UNIVERSAL REMOTE CONTROL
Instruction Manual

DESCRIPTION

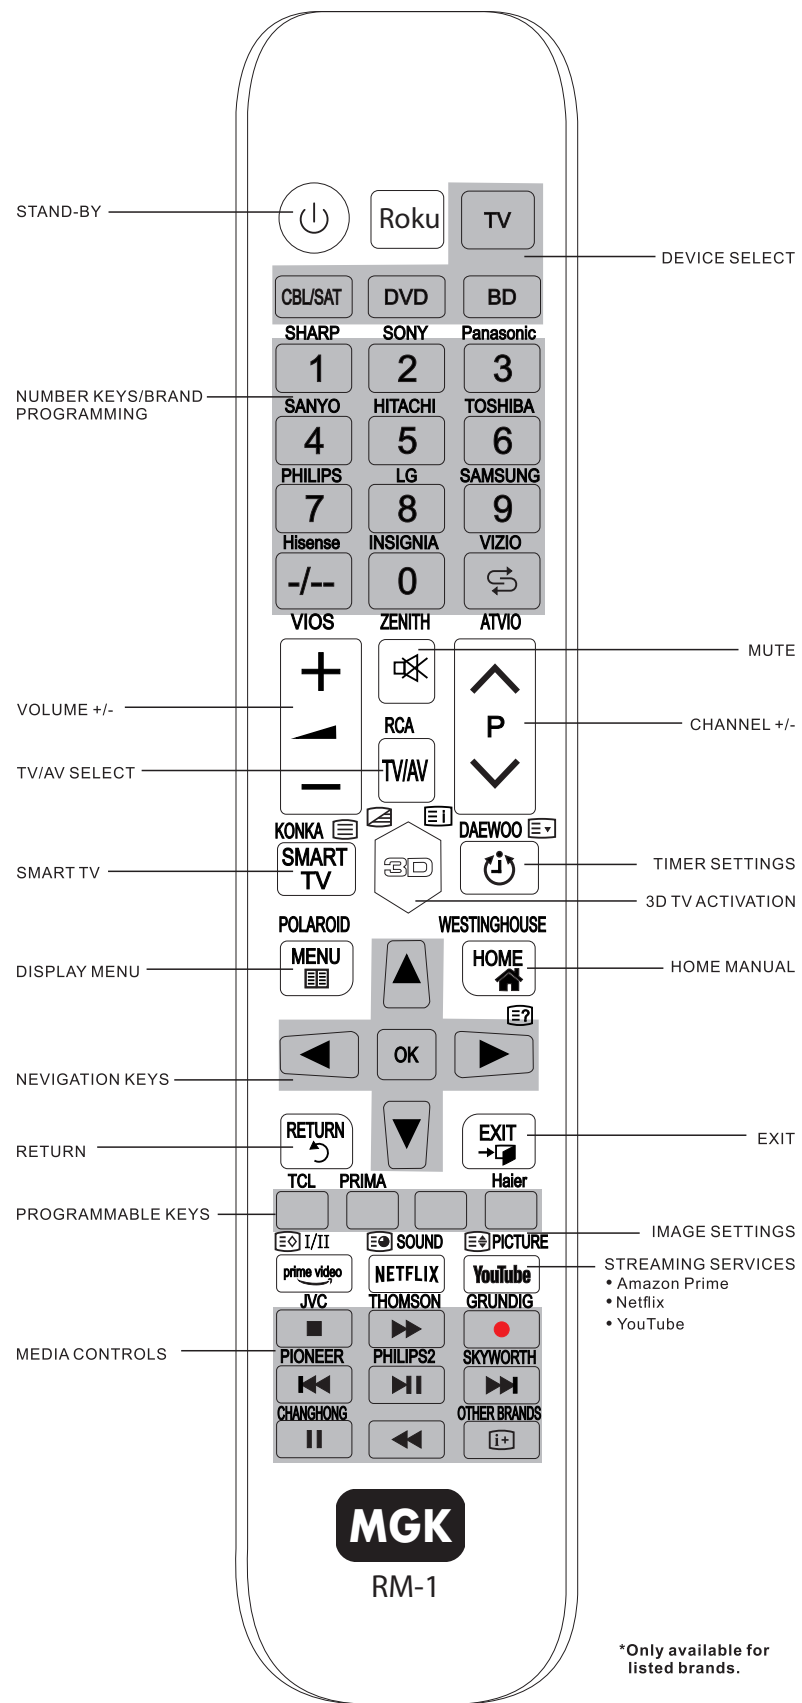

SPECIFICATIONS

Power Supply: 3V --- (2xAAA)
Dimensions: 23 x 4.7 x 2.3cm

Specifications are subject to change without prior notice.

PROGRAMMING MODES

BY BRAND


Press the TV+ the button that corresponds to the brand of your TV. Review the table of marks.
Example: [TV]+2, for SONY television

Check that the basic buttons work correctly. If it doesn't work, repeat step 1.

AUTO SEARCH

With the TV turned on and the remote pointed at it:

- 1 Press the TV button to access the TV programming mode.
- 2 Press and hold the power button until the TV button until the TV begins to flash.
- 3 Keep the remote control directed towards the TV to be programmed. The control should be in auto search mode.
- 4 Be patient, this process should take a couple of minutes. Keep the remote control pointed at the TV and your fingers on the OK button and ready to press.
- 5 When the TV turns OFF, immediately press the OK button so that your TV code is recorded on the remote control. (This step is very important for the proper operation of the remote control.)
- 6 Test the buttons on the remote control to see if they work properly (ON, OFF, Etc.)
- 7 If the button on the remote control do not work, please repeat the auto search process again. (Sometimes this process must be repeated more than once.)

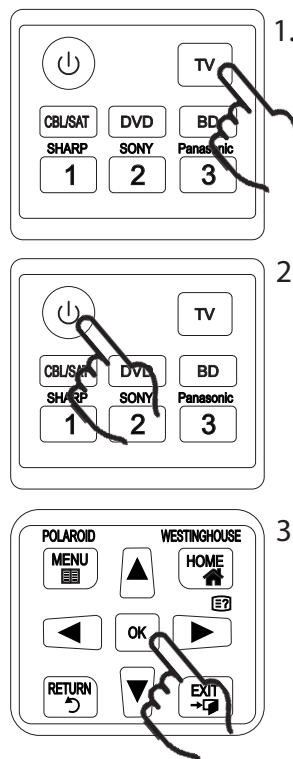

PROGRAMMING OTHER EQUIPMENT

The control can be used to control CBL, SAT, DVD, BD, Roku-----To configure these equipments, follow the programming method by brand, replacing the TV button with the Button of the type of equipment to be controlled (TV, CBL/SAT, DVD, BD, ROKU devices).

TV BRAND TABLE

BUTTON	BRAND	BUTTON	BRAND
1	SHARP	1	THOMSON
2	SONY	2	PIONEER
3	PANASONIC	3	SKYWORTH
4	SANYO	4	VIZIO
5	HITACHI	5	VIOS
6	TOSHIBA	6	ATVIO
7	PHILIPS	7	RCA
8	LG	8	JVC
9	SAMSUNG	9	GRUNDIG
-/--	HISENSE	-/--	CHANGHONG
0	INSIGNIA	0	PHILIPS 2
RED BUTTON	TCL	RED BUTTON	KONKA
BLUE BUTTON	HAIER	BLUE BUTTON	WESTINGHOUSE
GREEN BUTTON	PRIMA	GREEN BUTTON	POLAROID
DAEWOO	DAEWOO	OTRAS MARCAS	OTRAS MARCAS

BUTTON FUNCTIONS

No.	BUTTON	BRAND	FUNCTION
1	POWER		ON/OFF
2	TV/CBL/SAT/BO/DVD		SELECT CBL/SAT/BD/DVD
3	1	SHARP	TV/CBL/SAT/BD/DVD
4	2	SONY	TV/CBL/SAT/BD/DVD
5	3	PANASONIC	TV/CBL/SAT/BD/DVD
6	4	SANYO	TV/CBL/SAT/BD/DVD
7	5	HITACHI	TV/CBL/SAT/BD/DVD
8	6	TOSHIBA	TV/CBL/SAT/BD/DVD
9	7	PHILIPS	TV/CBL/SAT/BD/DVD
10	8	LG	TV/CBL/SAT/BD/DVD
11	9	SAMSUNG	TV/CBL/SAT/BD/DVD
12	-/--	HISENSE	TV/CBL/SAT/BD/DVD
13	0	INSIGNIA	TV/CBL/SAT/BD/DVD
14	↶	VIZIO	PRESS TO JUMP BACK OR RETURN (DEPENDS ON FUNCTION)
15	🔇		MUTE
16	CH+	ATVIO	NEXT CHANNEL
17	CH-		PREVIOUS CHANNEL
18	VOL+	VIOS	VOLUME INCREASE
19	VOL-		VOLUME DECREASE
20	TV/AV	RCA	TV/AV SELECT
21	SMART TV	KONKA	SMART TV MENU SELECT
22	3D		3D TV ACTIVATION
23	⏰	DAEWOO	SLEEP TIMER
24	MENU	POLAROID	MAIN MENU, SELECT TO ACCESS ALTERNATIVE SETTINGS
25	HOME	WESTINGHOUSE	HOME PAGE
26	📏		NEVIGATION CONTROLS
27	OK		"OK" SELECTION
28	↶		RETURN TO PREVIOUS
29	➔		EXIT
30	RED BUTTON	TCL	TV BRAND
31	GREEN BUTTON	PRIMA	TV BRAND
32	YELLOW BUTTON		TV BRAND
33	BLUE BUTTON	HAIER	TV BRAND
34	APRM		Amazon Prime
35	NFLX		Netflix
36	PLAY YT		YouTube
37	■	JVC	STOP
38	▶▶	THOMSON	NEXT CHAPTER
39	●	GRUNDIG	RECORD
40	⏮	PIONEER	FAST REWIND
41	▶	PHILIPS 2	PLAY
42	▶▶	SKYWORTH	FAST FORWARD
43	⏸	CHANGHONG	PAUSE
44	◀◀		PREVIOUS CHAPTER
45	ⓘ+	OTHER BRANDS	OTHER TV BRANDS

BATTERY INSSERT

Remove the back cover and install 2 AAA batteries. Check the polarity marked on the bottom of the compartment.
(Batteries are not included.)

*Only available for listed brands.