

SOUNDLOGIC™

**WH-6/4685
4 IN 1 WIRELESS HEADPHONE**



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

CONTENTS

Getting Started	1
Box Contents	1
Features	1
Battery Safety	1
Description of Parts	2
Instructions	2
Additional Instructions	3
Caution	3
FCC Warning	4
Warranty Information	5

GETTING STARTED

- Remove the 4 in 1 Wireless Headphone from the box.
- Remove any packaging from the product.
- Place packaging inside the box and either store or dispose of it safely.

BOX CONTENTS

- Wireless headphone
- Transmitter
- Audio & RCA Cable
- Instruction Manual

FEATURES

FM-Radio

Wireless Headphone

Online Net Chat capabilities : 83-108MHz

Headphone frequency range : 100ft

Maximum wireless range : receive signal behind heavy doors and walls.

Multi-directional receiving

Multi-functional Input : receive from TV, VCR, CD/DVD players, and other electronic devices.

BATTERY SAFETY

- Ensure the battery compartments are secure.
- Only use recommended batteries (4xAAA batteries required).
- Ensure correct installation of batteries, observing the positive and negative marks on both the battery and the compartment.
- Replace a full set of batteries at one time. Never mix old batteries with new ones.
- Store unused batteries in their packaging and keep them away from metal objects that may cause a short circuit.
- Remove dead batteries from equipment and dispose of them safely.
- Remove batteries from appliances that will not be used for long periods of time.
- Supervise children with batteries at all times.
- Remember to keep AAA batteries away from small children as they can easily be swallowed.
- Seek medical attention if batteries are swallowed.

NEVER

- Mix old and new batteries.
- Mix different types of batteries.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

DESCRIPTION OF PARTS


A. Receiver - Wireless Headphone

1. Antenna
2. Power switch & volume tuner
3. Reset
4. Power light
5. Scan
6. Battery compartment
(2xAAA batteries required)
7. Audio-cable socket
8. Audio cable with microphone
9. RCA cable



B. Transmitter

1. Power switch
2. Power indicator light (front)
3. AUX Jack for audio input
(Stereo jack is plugged into earphone or Audio output socket of computer, CD, Tape recorder, etc)
4. Audio-IN Left & Right sound channel
(Audio in plug is inserted left & right sound Channel of TV, DVD and VCR)
5. Battery compartment
(2 x AAA batteries required)

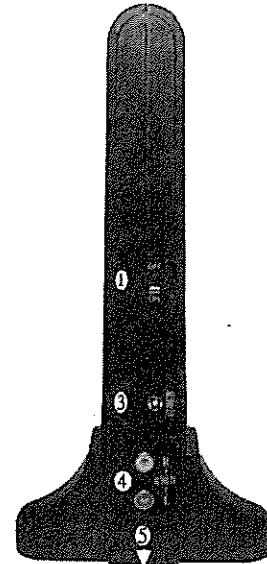

INSTRUCTIONS

• Installation

- Installation of receiver (Figure A -Wireless Headphone)
Open battery compartment cover and place in 2xAAA batteries.
- Installation of transmitter (Figure B)
- Stereo plug should be respectively inserted into transmitter's audio input socket and audio output earphone socket of computer or CD player.
(Note: Volume of received sound is also determined by volume of computer or CD player.)

• Operating instructions

- Turn power switch downward to activate transmitter, the power light should be on.
- Pull up receiver's antenna, turn receiver's power switch upward and volume tuner to your desired position, the power light should be on.
- Press RESET button and SCAN button to receive TV sound.
(Note: the first sound received is from TV, the second FM radio and then computers, DV players & similar products.)

ADDITIONAL INSTRUCTIONS

- **Radio Receiving**

Receiver can be used as FM radio receiver when used alone.

- Turn the volume dial upward to turn on receiver's volume control, the power light should be on and pull up receiver's antenna.
- Press RESET and then SCAN to automatically scan FM radio between 88MHz to 109MHz; one radio station will be scanned and locked for each time the SCAN button is pressed.

- **Using Wired Headphone**

- Receiver is supplied with an audio cable to use as a wired headphone.
- Plug in the single black jack into the Headphone and then plug the black and pink jacks into the computer. The black jack is for the headphone input location, the pink jack is for the microphone input location.

- **Using Voice Chat**

- Make sure that wireless headphone is connected with included wire into the headphone input and microphone input jacks of the computer. (See using wired headphone instructions)
- Connect to an online chat program and start talking into the built in microphone that is located on the wire that connects the headphones to the computer.

CAUTION

- If sound is too loud or distorted, please turn down source volume (TV or other products) to improve receiving effect.
- Replace batteries when the following problem occurs.
 - Power light is dim
- Receiver can barely receive sound
 - Sound volume is low and distorted

Turn off transmitter's power supply after usage.

FCC Warning

“Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY INFORMATION

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.