

**SOUNDLOGIC** XT

**Tailgate Speaker System**



**Item No: BTTG-1/6357**

**INSTRUCTION MANUAL**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY AND  
RETAIN FOR FUTURE USE**

Thank you for purchasing Soundlogic / XT Tailgate Speaker System. Please store this manual in a safe place for future reference.

#### Getting Started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

#### Package Contents

- Bluetooth portable speaker
- AC/DC power adaptor
- Aux-in cable
- Microphone
- Instruction Manual


#### Product Features

- Enjoy wireless music from various devices through Bluetooth Technology
- Play music right from your Flash Drive / SD card
- FM radio
- 3.5mm auxiliary cable (included) allows you to connect to any non-Bluetooth devices.
- Built-in rechargeable battery gives you the freedom to take your favorite music anywhere, anytime.


#### SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

Description of Parts

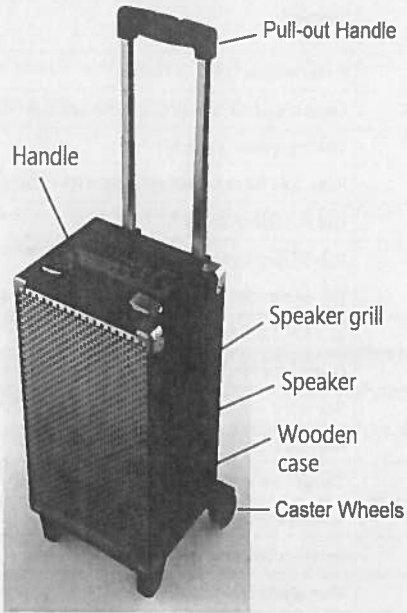

Location of Controls

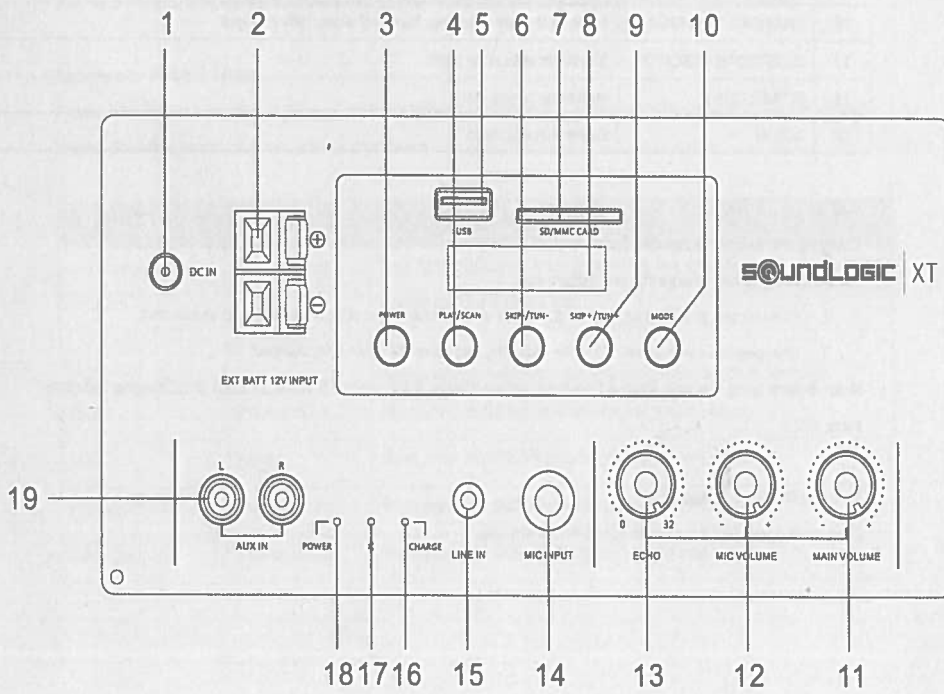

Number	Item	Function
1	DC IN	Power Adapter Input (DC Input)
2	EXT BATT 12V INPUT	Connect external DC 12V battery for operation (External Battery Not Included)
3	POWER	Turn the speaker On or Off
4	PLAY/SCAN	PLAY, Scan FM radio stations (only in FM radio mode)
5	USB	USB input (Flash Drive)
6	SKIP-/TUN-	USB/SD card mode: Skip to previous track FM radio mode: Skip to the previous preset radio station
7	SD/MMC CARD	SD/MMC CARD input
8	LED Display	Displays the information of the mode, channel or frequency
9	SKIP+/TUN+	Skip to the next track in USD/SD card mode/Skip to the next preset radio station in FM radio mode
10	MODE	Changes the mode between Bluetooth / USB-SD / FM radio / AUX 1 / AUX 2
11	MAIN VOLUME	Increases/Decreases the speaker volume
12	MIC VOLUME	Increases/Decrease the Microphone volume
13	ECHO	Microphone echo adjust
14	MIC INPUT	Microphone input
15	LINE IN	External audio input
16	CHARGINGINDICATOR	Turns RED while charging. Turns off when fully charged
17	BLUETOOTH INDICATOR	Bluetooth indicating light
18	POWER LIGHT	Indicating power state
19	AUX IN	External audio input

#### INSTRUCTIONS FOR USE

##### Charging the Tailgate Bluetooth Speaker

For best results, fully charge the unit before use.

1. Connect the provided adaptor to the DC IN of the speaker and plug the adapter to a wall port.
2. Charging Indicator turns RED while charging, and turns off when fully charged

Note: Before using the unit for the first time, please charge it for around 5 hours or until the Charging Indicator turns off.

##### Turn On/Off the Speaker

Long press the POWER button to turn ON/OFF the unit.

**Turn the speaker to Bluetooth pairing mode -**

1. Turn ON the speaker.
2. You would hear a tone and Blue LED Light will begin to blink. The speaker is now in pairing mode.  
(Note: speaker pairs automatically with the last connected device.)

**Pairing your device with the Speaker –**

Your Bluetooth Tailgate Speaker can stream wireless audio from any Bluetooth enabled device within the range of 27-33 Feet. Simply follow the below steps.

1. Turn ON the speaker.
2. You would hear a tone and Blue LED light will begin to blink. The speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. Bluetooth Tailgate Speaker would appear as "SL BT TAILGATER", in the list of searched devices. Select it from the available list of devices.
6. If required, enter the password '0000' to confirm pairing.
7. Once paired successfully, the Blue LED will stay on.
8. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

**Listening to Wireless Music**

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Turn MAIN VOLUME knob located on the control panel to adjust the volume to your desired level, or Adjust volume from the source device (in Bluetooth mode only).
Pause	Playing music	Short press PLAY/SCAN button once to pause music
Play	Pause	Short press PLAY/SCAN button once to resume music
Previous track	Playing music	Short press the SKIP-/TUN- button to the previous track
Next track	Playing music	Short press the SKIP+/TUN+ button to the next track

#### Listening to Music using USB / SD Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or SD card into the SD/MMC CARD Slot. Music plays automatically.
3. Short press the SKIP+/TUN+ button or SKIP-/TUN- button to move forward or backward on your playlist.
4. Short press PLAY/SCAN button to Play or Pause a track.

**Note:** While using Bluetooth, if you insert USB Flash drive or SD Card, speaker would disconnect the Bluetooth connection and switch to USB / SD card function. You can press MODE button again, to select the Bluetooth mode.

#### Tips!!

1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / USB-SD / FM radio / AUX 1 / AUX 2.
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Always use the adaptor included with the pack to charge the internal battery of the speaker. Charging through unauthorized adaptor may damage the product, and will terminate all warranty privileges instantly.
4. Do not overcharge the speaker.

#### Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

#### Listening to Music using AUX-in

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the LINE IN port of the speaker for AUX 1 function or AV cable (not included) to the AUX IN port of the speaker for AUX 2 function respectively. And, the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
3. Press the MODE button to AUX 1 or AUX 2 function.
4. Select your favorite song at the source device.

(Note: While using AUX-In function, all functions such as playing next/previous track can be controlled only through your source device).

#### Listening FM radio

1. Turn on the speaker.
2. Press the MODE button to radio function.
3. Press the PLAY/SCAN button for searching and recording all radio stations within frequency range 87.5-108MHz.
4. Press the SKIP+/TUN+ or SKIP-/TUN- button for listening next or previous preset radio station.

#### Using the Microphone

1. Turn on the speaker.
2. Insert the plug of the Microphone into the MIC INPUT of the speaker.
3. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation.
4. Turn MIC VOLUME & MAIN VOLUME knob (and ECHO knob) to adjust the desired level (and ECHO output) respectively.

#### Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

#### Product Specifications:

- Bluetooth version : 2.1 + EDR
- Speaker output : 20 Watts
- Unit size : 10-3/4" x 9-3/4" x 20"
- Unit weight : 6.9Kg
- Power supply : AC/DC adaptor (Input: AC 100-240V 50/60Hz 1.5A, Output: DC 15V 2A centre positive)
- Bluetooth range : 27 - 33 Feet
- FM frequency range : 87.5-108MHz
- Built-In Rechargeable Lead-acid Battery: 12V 2.6Ah

#### TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC/DC adaptor plug not connected to the wall outlet	Plug to the wall outlet.
No sound	Volume in minimum position.	Turn MAIN VOLUME knob to increase the volume.
	The connected device is not in play mode.	Play the music in the connected device and make sure the volume level is in high level.
	Input source incorrect.	Press the MODE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn MAIN VOLUME knob to decrease the volume.

#### FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Limited Warranty



This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.