

BFHM-12/6708 Bluetooth Foldable Stereo Headphone with Mic



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth Headphone
- USB charging cable
- 3.5mm auxiliary cable
- Instruction Manual


Key Features

- Bluetooth Stereo Headphone
- Built-in microphone for hands-free use with Bluetooth enabled devices
- Great Sound
- Foldable and comfortable adjustable design
- Connects automatically to previously connected devices
- Rechargeable batteries built-in
- Auxiliary Back Up, if battery runs out
- Auxiliary cord included
- Built-in FM Radio
- Built-in Micro SD Card slot, to play music directly from memory card

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to
 prevent against electric shock, explosion and/or injury to yourself and damage to the
 unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician.
 Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use the handset at excessive volume levels, as damage to hearing may occur.

Description of Parts:

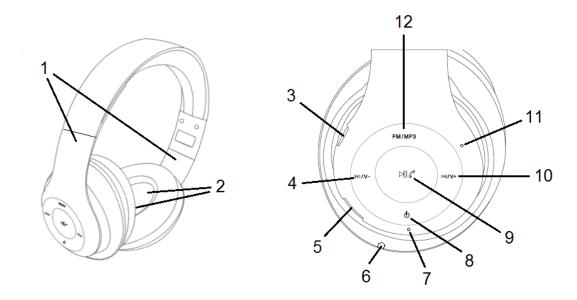

| 1 | Foldable and adjustable headband |
|----|-----------------------------------------|
| 2 | Speakers |
| 3 | Charging port |
| 4 | Previous Track ₩ / Volume Decrease (V-) |
| 5 | Micro SD card slot |
| 6 | Auxiliary input |
| 7 | LED Light Indicator |
| 8 | Power ON/OFF button |
| 9 | Play / Pause / Phone button |
| 10 | Next Track ► / Volume Increase (V+) |
| 11 | Built-In Microphone |
| 12 | FM/MP3 mode button |

INSTRUCTIONS FOR USE

Charging Instructions

- The Bluetooth Headphone comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Cord to charge the Bluetooth Headphone. Please charge for about 2 hours.
- Connect the USB charging cable to a computer USB port or other suitable charging source and the Micro USB plug to the charging port of the device. The Red LED light turns on while the device is charging. It takes 2 hours for the unit to fully charge. When the battery is fully charged, Red LED light will turn off.

Turning on/off the device

Press and hold the Power ON/OFF button for around 6 seconds to turn ON the device with sound message "Bluetooth mode", Red and Blue LED lights will flash alternatively. Press and hold the Power ON/OFF button for around 2 seconds to turn OFF the device with sound message "Power off".

Pairing the Headphone with Bluetooth devices (phone or music device)

- Ensure the Headphone is turned off, and then press and hold the Power ON/OFF button for around 6 seconds to turn on with sound message "Bluetooth mode", Red and Blue LED lights will flash alternatively. Place the Headphone and Bluetooth device (phone or music device) so that they are no further than 3 feet apart;
- Activate the Bluetooth function on your Bluetooth device (phone or music device).
 Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the "SL BT HDSET" from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successful, indication tone will be heard and the only Blue LED is ON.
- You can now start to use the Headphone.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Headphone with a device, the Headphone will remember this
 device and will pair automatically when the device's Bluetooth is activated and in range.
 You do not need to re-pair any previously connected devices.
- The Bluetooth Headphone will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.
- Once the Bluetooth Headphone is paired with your device the music will transmit through the Bluetooth Headphone. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

 Once the Headphone is paired with your device you can stream music wirelessly through the Bluetooth Headphone. Should you encounter any problems while streaming please refer your device's user manual for further information.

Control Function

| Function | Operation | Button |
|-----------------|---------------|-----------------------------------------------------------|
| Increase Volume | Playing music | A long press on the V+ button once will increase the |
| | | volume |
| Decrease Volume | Playing music | A long press on the V- button once will decrease the |
| | | volume |
| Pause | Playing music | A short press on the Play / Pause button will pause the |
| | | music |
| Play | Pausing | A short press on the Play / Pause button will restart the |
| | | music |
| Previous track | Playing music | A short press on the ₩ button will return you to the |
| | | previous track |
| Next track | Playing music | A short press on the 🔰 button will take you to the next |
| | | track |

Making a call with the Bluetooth Headphone in Bluetooth mode Basic operation

| Function | Operation | Button |
|----------------------|-----------------------|-------------------------------------------------|
| Answer a call | Incoming Call | Press the Phone button once to answer an |
| | | incoming call |
| Reject Incoming Call | Incoming Call | Long press the Phone button |
| End a call | Incoming Call | After your phone conversation, short press |
| | - | the Phone button. |
| Increase Volume | During a call | A long press on the V+ button once will |
| | | increase the volume |
| Decrease Volume | During a call | A long press on the V- button once will |
| | | decrease the volume |
| Redial last number | Standby mode and | Long press the Phone button |
| | connected to a device | |

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

FM RADIO

Turn on the Headphone

Press and hold the Power ON/OFF button for around 6 seconds to turn ON the Headphone.

<u>Auto-scan Stations & Play FM Radio</u>

- Press the FM/MP3 mode button once, it will enter FM mode with sound message "FM mode".
- 2. To AUTO-SCAN the stations, press Play / Pause button once.
- 3. It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- 4. Press ₩ or ₩ to skip selected stations.
- 5. Long press the V+ or V- button to increase or decrease the volume.

Listening to Music using Micro SD card slot

- 1. Turn on the Headphone.
- 2. Insert Micro card into the card slot. There comes sound message "Play by TF card" and music would be automatically streamed.
- 3. Press **> →** or **★** to move forward or backward on your playlist.
- 4. Press Play / Pause button to Play or Pause a track.
- 5. Long press the V+ or V- button to increase or decrease the volume.

<u>Note:</u> While using Bluetooth, if you insert Micro SD card, Headphone would disconnect the Bluetooth connection and switch to Micro SD card function. You can press FM/MP3 mode button again, to select the Bluetooth mode.

Tips!!

- 1. Press the FM/MP3 mode button to switch different functions of the Headphone. The functions are Bluetooth / FM / TF card.
- 2. When the headphone is not in use, turn it OFF to save the battery power.

Listening to Music using AUX-In Mode

1. Insert the 3.5mm auxiliary cable (included) in to the Aux input of the Headphone. And, the other end of the cable connects to the audio device (such as cell phone / computer / tablet etc.).

2. Select your favorite song at the source device and play.

(Note: Using this Aux-in mode, you do not need to turn on the Headphone, and you need to control the volume increase/decrease, play/pause, next/previous track through your source device.)

Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.

Care and Maintenance

Read the following recommendations before using the Bluetooth Headphone. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Headphone to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

In case the device doesn't function properly, send it to the store you bought it. The staff will help you to the problem.

Specifications

| Bluetooth specification | Bluetooth 3.0 |
|-------------------------|--------------------|
| Operating distance | 33 Feet |
| FM frequency range | 87.5 – 108MHz |
| Working time | About 3 hours |
| Charging input voltage | DC 5V |
| Charging time | About 2 hours |
| Speaker output | 35mW total |
| Built-In Battery | 160mAh |
| Micro SD card | Support up to 32GB |

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.