KEY NINJA®

LEGEND + INSTRUCTIONS

A Screws

B Front Plate



C Back Plate

D Posts





E Spacers O

F "S" Hook

MAINTENANCE

To replace batteries, remove piece B and unscrew two screws on bottom to separate top and bottom pieces.

If posts get stuck in the screws, use pliers to hold posts D

and unscrew with screwdriver.









(B) Tighten A screws using a coin, card or your Wallet Ninja



For more information visit www.keyninja.com