

Copper Cook Deep Square Pan Set

Instruction Manual

Set Includes:



Steam Rack



Fry Basket



Glass Lid



9 1/2" Square Pan

Before Use:

1. Spread A Light Coat Of Vegetable Oil Over The Entire Portion Of The Pan
2. Place The Copper Cook Deep Square Pan On Your Stovetop Over Medium Heat
3. Watch The Copper Cook Deep Square Pan Carefully, Remove The Copper Cook Deep Square Pan From The Stove Once It Begins To Smoke.
4. Let The Copper Cook Deep Square Pan Cool Completely
5. Wipe Away All Of The Remaining Oil With Cloth Or Paper Towel
6. You Are Now Ready To Go


While Using :

1. Copper Cook Deep Square Pan Does Not Require Butter Or Oil While Cooking
2. Copper Cook Deep Square Pan Is Suggested To Be Used On Low To Medium Heat While Cooking

Care And Storage

- Copper Cook Deep Square Pan Can Be Hand Washed Or Used In The Dishwasher
- Copper Cook Deep Square Pan Is Suggested To Be Hung By The Handle When Stored As This Prevents It From Scratching Or Damaging

Fry Basket Instructions:

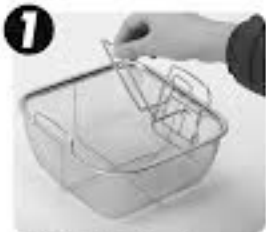

Lift Up The Handle



Insert The Fry Basket Into The Pan By Placing It Along The Edge



The Fry Basket Can Be Placed Into The Pan At Two Levels. The First Level Is Used When You Are Frying Something. You Can Raise The Fry Basket To The Second Level When You Are Finished Cooking As This Drains Out The Oil

Steam Rack Instructions:



Peel Off The Protection Foil On Both Sides



Pinch The Legs And Insert It Into The Holding Slots On The Bottom



Place Steam Rack On Bottom Of Pan When Using To Cook

- Must Not Use Your Cookware In The Microwave Or Toaster Oven As This Might Cause Electric Sparks Or Fire, Or Damage The Microwave And Your Cookware
- Check Cookware During Use To Avoid Potential Injury To Children Or The Risk Of Fire
- Look Out For Children Who Are Near Cookware That Is In Use, Or Injury May Result
- Must Not Handle Copper Cook Deep Square Pan Inside The Oven Without Using Oven Mitts As The Pan And Handles Will Be Very Hot
- Be Careful When Using The Glass Lid. As With Any Glassware For Cooking, The Lid Could Break Due To Sudden Temperature Changes Or Impact If It Is Dropped Or Knocked Against A Hard Object
- Must Not Directly Expose The Glass To A Burner Or Other Source Of Heat, Must Not Use Lid In Oven
- Allow Lid To Cool Before Washing
- Must Not Allow Wet Cloth To Touch Lid When Lid Is Hot
- Preheat Oven Before Placing Cookware Inside The Oven
- Must Not Apply Sudden Force To The Glass Lid, As It May Shatter
- Must Not Use The Lid If The Lid Cracks, Chips, Or Becomes Badly Scratched
- Must Not Remove Dried Food From The Lid With Sharp Or Metal Utensils As The Lid May Be Damaged
- Must Not Attempt To Repair Lid If It Is Chipped Or Cracked
- Use Care When Handling Broken Glass Because The Pieces May Be Extremely Small
- Always Use Care When Handling Hot Cookware To Avoid Potential Injury. Lid And Handles Might Become Hot During Prolonged Cooking
- Never Leave An Empty Copper Cook Deep Square Pan Over A Burner That Is Hot Or Turned On. This May Damage Your Cookware On The Stove
- This Product Is For Home Use Only. It Is Not Intended For Camping Or Commercial Use
- Must Not Use Aerosol Cooking Sprays. These Sprays Will Build Up On Cookware And Become Difficult To Remove While Reducing The Nonstick Coating

⚠ Caution

Read All Warnings And Safe Use Instructions Carefully And Thoroughly Before Use.
Failure To Follow The Warnings Provided Below May Result In Personal Injury,
Property Damage, Or Damage To Your Copper Cook Deep Square Pan Set

Caution: Heat Resistant Upto 800°F