


tech toyz™

AERODRONE WI-FI

WIFI Drone with VR Headset

FOR AGE
14+

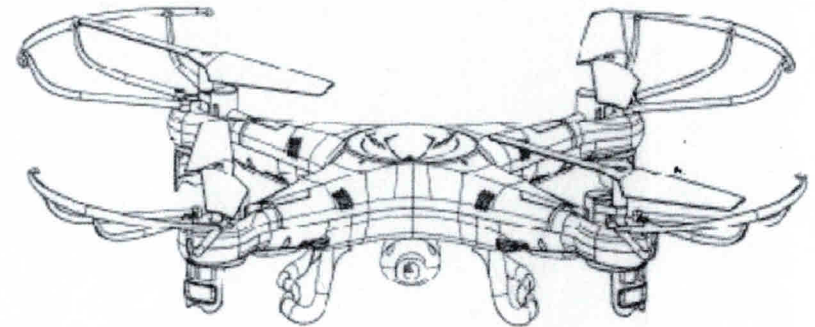

ITEM NO: QWVR-4/0715

INSTRUCTION MANUAL

Please read all instructions carefully and retain for future use

Note: Physical damage to the product or its parts, caused due to operational reasons is not covered in warranty. Manufacturers/distributors/retailers are not responsible and/or liable for any damage or loss property caused due to use of this product.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 30 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

GETTING STARTED

- Remove the product from the box.
- Remove any packaging from the product.
- Please read all instructions and retain all packaging until you have checked and counted all of the parts.

PACKAGE CONTENTS

- WIFI Quadcopter with Camera (with removable rechargeable battery)
- Remote Controller
- Adjustable Smart Phone Mount
- USB Charging Cable
- 6 Protecting Frames with Lock Screws and a Screwdriver
- 2 Landing Skids with Lock Screws
- 2 pairs of spare blades
- VR Headset with headbands
- Instruction Manual

CHARGING THE QUADCOPTER

1. Slide the Quadcopter's Power Switch to OFF.
2. Slide the battery cover (located underneath the quadcopter), backward to open.
3. Pull out the battery wire from the power port.
4. Insert the USB plug of the USB Charging Cable (included) into the computer USB port and connect the other end of the cable to the battery connector. Red LED light on the USB cable is on while charging. After the battery is fully charged, Red LED light turns off. It takes about 100 minutes to fully charge the battery.
5. Disconnect the battery connector from the charging cable and reconnect the battery to the Quadcopter.
6. Once fully charged, the Quadcopter can fly for about 6-8 minutes. Actual fly time is subject to individual handling & flying conditions.



Note: Battery life / Flying time may vary depending on flying conditions, handling, control range etc.

Caution:

If the Quadcopter needs to be recharged, allow 10-15 minutes for it to cool down before recharging.

- Do not overcharge the battery.
- If the battery becomes too hot while charging then remove it from charging immediately and allow it to cool down.
- Do not reconstruct battery.
- Do not connect the battery to an electrical outlet.

Note: Live Video Streaming, Video Recording, Still Photography can be performed only while flying in WiFi mode through a smart phone, tablet etc. See further details under WIFI OPERATION section of this manual.

SUITABLE FLYING CONDITIONS

1. Places with no or few obstacles are recommended.
2. Do not fly your Quadcopter in strong winds as it may affect the remote-control system and interfere with your control leading to a crash or damage to the Quadcopter.
3. Do not fly in rain, or damp conditions.

Caution:

- Never allow young children to use this product alone.
- Parental guidance is highly recommended during the use of this product.
- DO NOT operate your Quadcopter if someone else is operating a similar device in the same operating range, as it may interfere with the frequency range and impact the controlling capacity of the Quadcopter. Multiple Quadcopter operating simultaneously must be on different frequency bands.
- Discretionary use of camera: It is a legal offence to use Quadcopter camera function for recording inappropriate content. Kindly respect others' privacy while using camera function outside of your household. Local laws apply.

INSTRUCTIONS FOR USE

This Quadcopter can be flown in one of the two ways.

- A. Using Remote Controller
- B. Using your Smart Phone / Tablet through WiFi.

Fly Quadcopter using Remote Controller

Battery installation on the Remote Controller

Use a screwdriver to open the battery cover of the remote controller. Install 4 x "AAA" batteries (not included) in the battery compartment as indicated. Put back the battery cover and use the screwdriver to secure.

Notice:

1. Install the battery as per the indicated polarity.
2. Do not mix different types of batteries
3. Do not mix new and old batteries.

