


## 3 Way Ultrasonic Home Protector Instructions

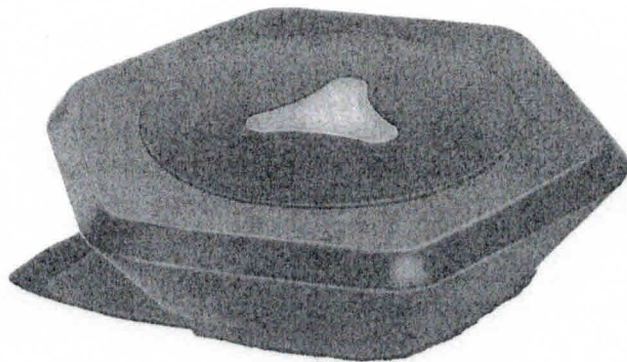

### Cautions

All batteries must be of the same type.  
If battery contents are leaking, discontinue use and discard.

Remove dead batteries or when not in use.  
Make sure to properly dispose of dead batteries in accordance with state and local laws.

### Battery Installation

Press down tab and remove battery cover (A). Install a 9V type battery (not included). Replace battery cover.

Option: (C) Unit may be powered using AC to DC 9V power adapter (Not included).

### Operation

Slide power switch (D) to desired setting:  
R for roaches, high frequency 38-65kHz, red light.  
Y for mosquitoes, medium frequency 30-38kHz, yellow light.  
G for mice, low frequency 23-30kHz, green light.

Note: sound cycles 5 seconds ON and 20 seconds OFF.  
LED (E) lights during the ON cycle so you know it is working. Place unit anywhere desired laying on its base or hang using hardware provided (F).

