


## WINNING COMBINATIONS

BAR BAR BAR	BAR BAR BAR	BAR BAR BAR	7	7	7
BAR BAR BAR	BAR BAR BAR	7	7	7	BAR BAR BAR
BAR BAR BAR	7	BAR BAR BAR	7	BAR BAR BAR	7
7	BAR BAR BAR	BAR BAR BAR	BAR BAR BAR	7	7

## BATTERY INSTALLATION / REPLACEMENT

This game requires two AA batteries (not included).

- Remove the battery door by pressing the tab down.
- Insert two AA batteries (not included) in the correct polarity as indicate inside the battery compartment.
- Replace the battery door and close.
- Do not mix old and new batteries.
- Take out batteries if the Slot Machine Bank will not be used for long periods of time.
- Replace the batteries when the product does not function properly.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the product.
- Do not allow children to change batteries.
- Please dispose of used batteries properly.
- Do not dispose of this product in a fire. The batteries may explode.

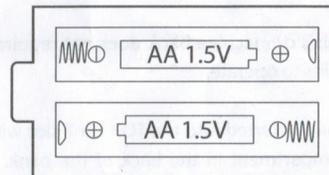

OPERATES WITH 2 AA BATTERIES  
(NOT INCLUDED)

**For ages 13+. This product is not suitable for children.**

**Keep these instruction for future reference as they contain important information.**

Protect the environment by not disposing of this product with household waste (2002/96/EC).

Check your local authority for recycling advice and facilities.

Made in China



FOR AGE 13+

## INSTRUCTIONS

Batteries are required to hear the bell and flash the light on a winner. See illustration on the far right on how to install batteries. Do not install the batteries if sound and flashing light are not desired.

This slot machine bank does not require batteries or coins to operate.

Coins inserted into the TOP LEFT slot will drop into a compartment in the back of the bank. Remove the door to collect any saved coins.

All coins dropped into the RIGHT FRONT slot (Coin Slot for Automatic Jackpot) will be released on any jackpot winnings. The coins can be released at any time by pushing the manual release lever in the coin drop opening.

When the slot machine coin bank is filled with a sufficient amount of coins, it will automatically drop the coins allowing you to continue to play the game. To save these coins simply deposit them in the bank coin slot on the rear of the product.


Spin the reels by using a smooth, gentle pull in the handle.

Release the handle immediately after the mechanism releases. NEVER jerk or pull the handle in a rough manner.

Always wait for the reels to stop before pulling the handle.

Always clear all the coins from the Coin Drop Opening before pulling the handle again.

This Slot Machine Bank is for saving and entertainment purposes only. It is not to be used as a gaming device.

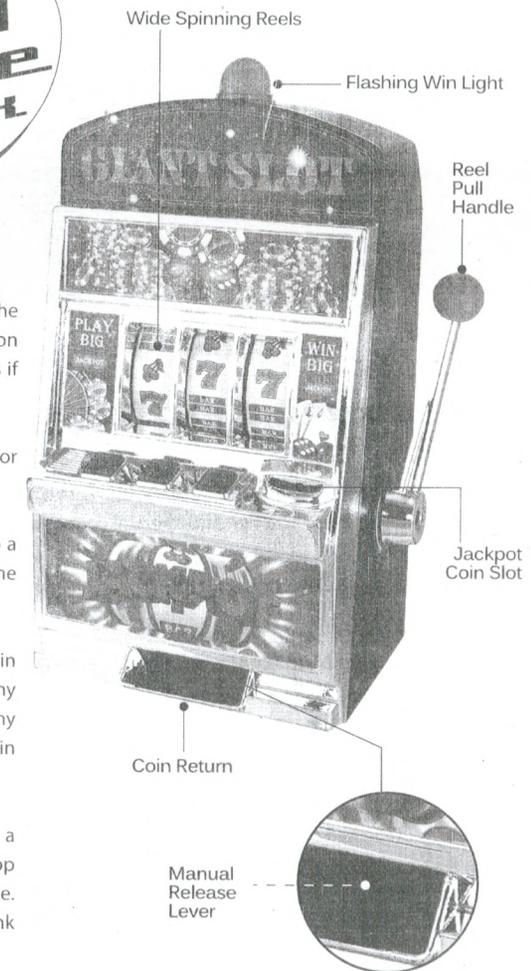

Made in China