

Manage your phone calls

You can use the TWS AIRBUDS to manage your phone calls.

Press the power button on either of the AIRBUDS to to perform the following functions.

- To accept a call, short press the power button once.
- To reject an incoming call, long press the power button once.
- To end a phone call, short press the power button any time during the call.
- To redial the last number in your smartphone's history, double-click the power button.

AIRBUDS[®]
TRUE WIRELESS SPORT

Technical Specifications

AIRBUDS

Design: In-ear (Intra-aural)
Driver Size: 0.6" (14mm)
Frequency Response: 20 Hz – 20 kHz
Wireless Connectivity: Bluetooth 5.0
Transmission Range: 33' (10m)
Battery Chemistry: Lithium-ion
Battery Capacity: 70mAh
Battery Voltage: 3.7V
Battery Runtime: Up to 3 hours
Battery Charge Time: Up to 1.5 hours

Charging Case

Battery Capacity: 350mAh
Charging Interface: Micro-USB
DC Input Power: 5 VDC at 1A

Charge your TWS AIRBUDS

Your TWS AIRBUDS come with a charging carry case.

To charge your AIRBUDS using the case, perform the following:

1. Connect each earbud to the cables inside the charging case.
2. Once the AIRBUDS are connected, press the power button inside the case to begin charging.

While charging, the LED indicator on both AIRBUDS will light up red. When charging is complete, the LED indicator will turn blue for up to 5 seconds. After 5 seconds of blue light, the LED indicator will go dark.

Charge the case

The charging case requires power to charge up your TWS AIRBUDS. To charge the case's internal battery, perform the following:

1. Connect the case to a power source with a micro-USB cable and compatible adapter (not included). The charging case does not always need to be connected to a power source to charge your TWS AIRBUDS. Power is supplied to the AIRBUDS from the charge case's internal battery. However, if the charge case's battery is depleted, you must plug it into a power source in order to charge your TWS AIRBUDS.

Troubleshooting

Can't pair the TWS AIRBUDS together

Power off both AIRBUDS, then power them back on. After the LED indicators on both AIRBUDS flash red and blue light, double-click the power button on either earphone. They should pair together.

Can't pair TWS AIRBUDS to mobile device

Check that the TWS AIRBUDS are charged and in pairing mode. Confirm the Bluetooth settings on your mobile device and verify "TWS" has been selected from list of discoverable Bluetooth devices.

If TWS AIRBUDS aren't on the list of discoverable devices, make sure they are within 30' of your mobile device.

Can't charge the TWS AIRBUDS with charging case

If your charging case isn't charging you AIRBUDS, most likely its internal battery is drained. Plug the charge case into a power source using a micro-USB cable and compatible adapter.

Power your TWS AIRBUDS on/off

1. Hold the power button on each earphone for 3 seconds.
2. Allow up to 8 seconds for the AIRBUDS to automatically pair with each other.

Pair your TWS AIRBUDS

1. Make sure that your TWS AIRBUDS is within 30' (10m) of your Bluetooth device.
2. Verify that you turned on Bluetooth on your mobile device.
3. Open the Bluetooth menu on your mobile device, and select the TWS AIRBUDS from the list of discovered Bluetooth devices.
4. Once paired, the LED indicator on each earphone will blink blue.

Reconnect your TWS AIRBUDS

When you power on your TWS AIRBUDS, they will automatically reconnect to the device they were paired with previously.

Control your music

You can control your music from either of the TWS AIRBUDS.

Each earphone is equipped with a "+" button, a "-" button, and a power button.

Use these buttons to perform the following functions:

- To pause or play audio, press the power button once.
- To skip to the next track, short press the "+" button once.
- To listen the previous track, short press the "-" button once.
- To increase the volume, long press the "+" button.
- To decrease the volume, long press the "-" button.