Getting Started

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL

Questions & Support

If you have any questions or problems concerning this product, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

In the Box


• OLID1093 - UV-C Sanitizing Cap Water Bottle (x1)

- USB Charging Cable (x1)
- User Manual (x1)

▲ Important Safety Instructions

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- This device is NOT a substitute for proper medical equipment or attention. Do NOT use this device in place of professional medical sterilization.
- · ONLY use the supplied power cable.
- Do not open this product or attempt to repair the unit yourself should it not be working. Doing so risks fire, shock or injury.
- The device contains an safety feature that powers it off automatically when the lid is unscrewed. Do NOT disable this safety feature. Never allow UV-C light to shine in eyes or on skin.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- It is recommended that the device be covered to protect it from exposure to dust if it will not be in use for a long period of time.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- · Unplug the power cable when not in use.
- Do not pull the power cable to disconnect, or use the cable as a handle.
- Do not use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- The device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Location of Controls

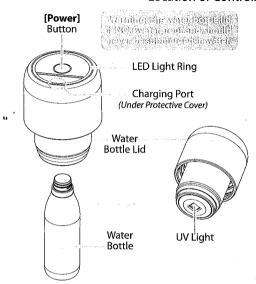

Charging the Lid's Built-In Battery

Undo the protective cover. Plug the small connector of the included USB charging cable into the charging port on the top of the water bottle's lid.

Plug the large connector into a USB power source such as the USB port on a computer, or a **5V/0.4A USB adapter** (not included) and plug into a wall outlet.

The LED light ring will *light up RED* while the lid is charging, and turn OFF when the lid is fully charged.

Low Battery Warning: If the lid is low on battery when sanitation is activated, the LED indicator will FLASH throughout the sanitation. If the battery is dead, the LED indicator will not light up at all.



Setting Up

Charge the lid's built-in battery fully before using.

Wash the bottle before using for the first time. See the **Washing the Bottle**& Lid section below for detailed instruction.

If you are sanitizing water, fill the water bottle with water. If you are sanitizing the bottle, leave it empty. Screw the lid onto the top of the water bottle. The lid should be completely, tightly screwed on.

Using the UV Sanitization

The UV sanitizing water bottle has two sanitization modes: Bottle Sanitize mode and Water Sanitize mode.

- Press the [Power] button once (1x) to Bottle Sanitize. This is to sanitize the inside of the bottle when it is empty (no water).
- Press the [Power] button twice (2x) to Water Sanitize. This is to sanitize water inside the bottle.
- When Bottle Sanitize mode is activated, the LED light ring on the lid of the sanitizer will light up BLUE, and the sanitizer will sterilize for the next 3 minutes. When it is finished, the LED light ring will flash BLUE 3 times then will turn off.
- When Water Sanitize mode is activated, the LED light ring on the lid of the sanitizer will turn GREEN, and the sanitizer will sterilize for the next 5 minutes. When it is finished, the LED light ring will flash GREEN 3 times then will turn off.

Important Safety Note: The UV-C Sanitizing Cap Water Bottle is not meant to professionally sterilize water. This device is not meant for medical use. It is intended only to help fight bacterial growth.

Caution: This device is designed to limit human & animal exposure to UV-C light, as it is harmful to skin and eyes. This device is equipped with a safety feature that automatically shuts the UV-C light OFF when the lid is not completely screwed on. Never defeat this feature or expost skin or eyes to UV-C lights.

Washing the Bottle & Lid

Warning: The lid is NOT waterproof, and cannot go in the dishwasher or be submerged in water!

- -The water bottle & the bottom of the lid can be washed normally with soap & water. They can also be sanitized with the UV sanitization. See instructions above.
- To clean the top of the lid, make sure the protective seal is covering the charging port, and carefully wipe with a damp cloth.